



TECHNICAL MANUAL RETURN TO GOV. DEPT.

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL

SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

(INCLUDING DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS)

KETTLE, HEATING, BITUMINOUS, GED,

TRAILER MOUNTED, 165 GALLON CAPACITY

(GENERAL STEEL TANK MODEL 1901)

FSN 3895-351-2354

This copy is a reprint which includes current
pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY

2020 FEB 1976

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL

SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

(INCLUDING DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS)

KETTLE, HEATING, BITUMINOUS, GED,

TRAILER MOUNTED, 165 GALLON CAPACITY

(GENERAL STEEL TANK MODEL 1901)

FSN 3895-351-2354

This copy is a reprint which includes current
pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY

**Organizational, Direct Support And
General Support Maintenance
Repair Parts And Special Tools List
(Including Depot Maintenance Repair
Parts and Special Tools)**

**KETTLE, HEATING, BITUMINOUS; GED;
TRAILER MOUNTED; 165 GALLON CAPACITY
(GENERAL STEEL TANK MODEL 1901)
FSN 3895-351-2354**

Current as of 9 November 1973

TM 5-3895-339-24P, 3 October 1972, is changed as follows:

Page v, paragraph 6. Change lines 5 and 6 to read, "To Commander, US Army Troop Support Command, ATTN: AMSTS-MPP".

Page 3, column 2, group 03, line 1. Change FSN 5305-964-0119 to read, "5305-855-0968".

Page 4, column 2, group 04, line 5. Add FSN "4730-196-1557" for 5½ inch pipe nipple.

Page 6, column 1, group 6, line 13. Change code XBOZZ to read, "PAOZZ". Column 2, add "4730-391-3771".

Page 7, column 1, line 3. Change code XBOZZ to read, "PAOZZ"; column 2, add FSN "4730-3771". Column 1, line 9, change code XBOZZ to read, "PAOZZ"; column 2, add FSN "4730-8289".

Page 8, column 2, group 07, line 5. Add FSN "5330-472-7847".

Page 10, column 2, line 10. Change FSN "5935-925-6494" to read, "5935-925-6495". Column 3, change terminal to read, "Contact".

Page 12, column 2, group 12, line 9. Change FSN 4030-869-1529 to read, "4030-869-1520".

Page 17, column 2, line 20. Add FSN "3895-451-4812". Column 1, line 21, change code XA to read "PAFZZ"; column 2, add FSN "5306-225-8498"; and column 3, change "Screw, Cap" to read "Bolt, Machine".

00, line 3. Add FSN "3895-451-4815".

Page 22, column 1, line 15. Change code XBOZZ to read, "PAOZZ". Column 2, add FSN "4277-8289".

Page 25, column 1, line 23. Change code XBOZZ to read, "PAOZZ". Column 2, add FSN "5167-7775". Column 2, line 25, change FSN 5935-925-6494 to read, "5935-925-6495"; column 3, change Terminal to read, "Contact".

Page 26, column 1, line 13. Change Code XBOZZ to read, "PAOZZ". Column 2, add FSN "5841-6798".

Page 28, column 2, group 12, line 9. Change FSN 4030-869-1529 to read, "4030-869-1520".

Page 45. Federal Stock Number 5305-225-3839, add Fig. No. 11, item No. 4. FSN 5310-422-2 add Fig. No. 8, item No. 19.

Page 47. Reference No. 419009, fig. No. 3, item No. 10, change Mfg. code 38740 to read, "240".

Page 48. Change Reference No. 60288-01A to read, "602088-01A".

By Order of the Secretary of the Army:

CREIGHTON W. ABRAM
General, United States Army
Chief of Staff.

Official:

VERNE L. BOWERS,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25B, (qty rqr block No. 422) Organizational maintenance requirements for Heaters, Bituminous.

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
KETTLE, HEATING, BITUMINOUS, GED,
TRAILER MOUNTED, 165 GALLON CAPACITY,
(GENERAL STEEL TANK MODEL 1901)**

FSN 3895-351-2354

Current as of 11 October 1972

		Listing page
SECTION	I. INTRODUCTION	iii
	II. PRESCRIBED LOAD ALLOWANCE LIST (Not applicable)	
	III. ORGANIZATIONAL MAINTENANCE REPAIR PARTS LIST	1
Group	01. Engine, engine mount, fuel tank coupling, shaft and collar	1
	02. Gear reducer, clutch and shifter lever, pump and pump bracket	1
	Gear reducer	1
	Clutch and shifter lever	1
	Asphalt pump and pump bracket	1
Group	03. Pump and gearbox case and mounting plate	3
	04. Valves, fittings, hose assemblies, and thermometer	4
	05. Hand spray attachment and flexible hose	4
	06. Fuel tank, pressure gage, air pump, valves, lines, and fittings	6
	07. Temperature control assembly	8
	08. Burner assembly	8
	09. Intersvehicular cable, lights, reflectors and wiring harness	9
	10. Spring, hanger assemblies, spring and axle clamp, and U-bolt	11
	11. Wheel, axle, and hub assemblies	11
	12. Tank, lid, support jacks, and frame	12
SECTION	IV. ORGANIZATIONAL MAINTENANCE SPECIAL TOOLS LIST (Not applicable)	
	V. DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS LIST	14
Group	01. Engine, engine mount, fuel tank, coupling, shaft and collar	14

04.	Valves, fittings, hose assemblies, and thermometer	19
05.	Hand spray attachment and flexible hose	20
06.	Fuel tank, pressure gage, air pump, valves, lines, and fittings	21
07.	Temperature control assembly	23
08.	Burner assembly	24
09.	Intervchicular cable, lights, reflectors, and wiring harness	24
10.	Spring, bumper assemblies, spring and axle clamp, and U-bolt	26
11.	Wheel, axle, and hub assemblies	27
12.	Tank, lid, support jacks, and frame	28

SECTION VI. DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE
SPECIAL TOOLS LIST (Not applicable)

VII. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX

1. Scope

a. This manual lists repair parts, special tools, test and support equipment required for the performance of organizational, direct support, general support, and depot maintenance of the heating kettle.

b. Repair parts listed represent those authorized for use at indicated maintenance levels and will be requisitioned on an "as required" basis until stockage is justified by demand in accordance with AR 710-2.

2. General

This repair parts and special tools list is divided into the following sections:

a. *Prescribed Load Allowance List—Section II.* Not applicable.

b. *Repair Parts List—Section III.* A list of repair parts authorized at the organizational level for the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of assembly groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

c. *Special Tools, Test and Support Equipment—Section IV.* Not applicable.

d. *Repair Parts List—Section V.* A list of repair parts authorized at the direct support, general support, and depot levels for the performance of maintenance. The list also includes parts which must be removed for the replacement of the authorized parts. Parts lists are composed of assembly groups in ascending numerical sequence, with parts in each group listed in figure and item number sequence.

e. *Special Tools, Test and Support Equipment—Section VI.* Not applicable.

f. *Federal Stock Number and Reference Number Index—Section VII.*

A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alpha-numeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and / or item number appearance.

3. Explanation of Columns

The following provides an explanation of columns

a. *Source, Maintenance, and Recoverability Codes (SMR).*

The SMR code is a five letter code composed of three parts consisting of a two (2) position source code, a two (2) position maintenance code, and one (1) position recoverability code. Support items listed in this RPSTL assigned maintenance levels, recoverability codes and no source code are requisitioned, with justification, through supply channels by use of the manufacturer's name and part number. Such support items are normally stocked.

(1) *Source code.* Indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions as follows:

Code	Definition
PA	Item procured and stocked for anticipated known usage.
PR	Item procured and stocked for insurance purposes because essentially dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which would be coded PA except that it is determined to be in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting, stocked only for subsequent or additional issues or outfittings. NOT subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specific machine repair activities.
PF	Support equipment which will not be stocked which will centrally procured on demand.
PG	Item procured and stocked to provide sustained support for life of the equipment applied to an item peculiar to the equipment which, because of probable discontinuation of production facilities, would be uneconomical to reproduce at a later date.
KD	An item of depot overhaul / repair kit purchased separately.
KF	An item of a maintenance kit and not purchased separately.
KB	Item included in both a depot overhaul kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general maintenance support level.
MD	Item to be manufactured or fabricated at depot maintenance level.

	requirements for the item will result in replacement of the next higher assembly.
XB	Item NOT procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram, instruction sheet, or field service drawing that is identified by manufacturer's part number.
XD	A low mortality item that is not stocked. When required, items will be requested and provided through normal supply channels.

NOTE

Canibalization or salvage may be used as a source supply for any items coded above *except* those with XA and support items restricted by AR 700-42.

(2) *Maintenance codes.* The maintenance code entered in the *third* position indicates the lowest maintenance level authorized to remove, replace, and use the item. The maintenance code entered in the *fourth* position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used in the *fourth* position, a dash (-) will be entered.

Code	Application / Explanation
C	Item is removed, replaced, used (third position), or complete repair (fourth position) at the organizational level.
F	Item is removed, replaced, used (third position), or complete repair (fourth position) at the direct support maintenance level.
H	Item is removed, replaced, used (third position) or complete repair (fourth position) at the general support maintenance level.
D	Item is removed, replaced, used (third position) or complete repair (fourth position) at the depot maintenance level.
L	Repair restricted to designated specialized repair activity (fourth position).
Z	Non-repairable. No repairs authorized (fourth position).
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for maintenance of this item (fourth position).

(3) *Recoverability code.* The recoverability code entered in the *fifth* position indicates the disposition action on unserviceable items.

Code	Definition
Z	Non-repairable item. When unserviceable, condemn and dispose at the level indicated in position three (3).
C	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.

	repairable, condemn and dispose at support level.
D	Repairable item. When beyond lower level capability, return to depot. Condemnation/disposal not authorized below depot level.
L	Repairable item. Repair, condemnation/disposal not authorized below depot specialized repair activity level.
A	Item requires special handling or Sonder procedures because of specific reasons: precious metal content, high dollar critical material, or hazardous material.

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item number and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Classification (FSC) in parenthesis. The FSC is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 700. Items that are included in kits and sets are identified below the name of the kit or set with quantity of each item in the kit or set indicated in front of item name.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the list item is used in performing the actual maintenance function. This measure is expressed by a character alphabetical abbreviation, e.g., ea, etc., and is the basis used to indicate quantity allowances in subsequent columns.

e. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown in the illustration figure, which is prepared for an assembly group or an assembly. A "V" appears in this column in lieu of a quantity indicated if a specific quantity is applicable, e.g., shims, etc.

f. 15-Day Organizational Maintenance Allowances.

(1) Items authorized for use as required for initial stockage are identified with an asterisk in the allowance column.

(2) The allowance columns are divided into four subcolumns. Indicated in each subcolumn is the total quantity of special tools authorized for the number of equipments supported. (Not applicable).

g. 30-Day DS/GS Maintenance Allowances.

(1) Items authorized for use as required for initial stockage are identified with an asterisk in the allowance column.

(2) The allowance columns are divided into three subcolumns. The quantitative allowance of special tools for DS / GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported. (Not applicable).

h. 1-Year Allowances Per 100 Equipment / Contingency Planning Purposes.

(1) Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) This column indicates the total quantity of special tools required for distribution and contingency planning purposes. (Not applicable).

i. Depot Maintenance Allowances Per 100 Equipment

(1) Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) This column indicates the total quantity of special tools authorized for depot maintenance of 100 equipments. (Not applicable).

TM 5-3895-339-14

TM 5-2805-256-14

TM 5-2805-256-24P

LO 5-2805-256-12

LO 5-3895-339-12

Operator, Organizational, Direct Support, and General Support Maintenance Models

Operator, Organizational, Direct Support, and General Support Maintenance Models
Engine, Gasoline, 1½ HP, Military Standard Models

Operator, Organizational, Direct Support, and General Support Maintenance Models
Repair Parts and Special Tools List, Engine, Gasoline, 1½ HP, Military Standard Models

Lubrication Order

Lubrication Order

5. How to Locate Repair Parts

a. When Federal stock numbers or reference number is unknown:

(1) Using the table of contents determine the assembly group within which the repair part belongs. This is necessary since illustrations are prepared for assembly groups, and listings are divided into the same groups.

(2) Find the illustration covering the assembly group to which the repair part belongs.

(3) Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) Using the repair parts listing, find the assembly group to which the repair part belongs and locate the illustration figure and item number noted on the illustration.

b. When the Federal stock number or reference number is known:

(1) Using the Index of Federal Stock Numbers

(1) *Figure number.* Indicates the number of the illustration on which the item is shown.

(2) *Item number.* Indicates the callout number used to reference the item on the illustration.

4. Special Information

a. The basis of issue for authorized special tools, test, and support equipment, is the number of items of equipment supported and the number of maintenance personnel allocated to perform required maintenance operations.

b. Parts which require manufacture or assembly of a maintenance level higher than that authorized for installation will indicate in the source code the higher maintenance level.

c. Repair parts kits and gasket sets appear as last entries in the repair parts listing for the assembly or assembly to which they apply.

d. The following publications pertain to the heating kettle and its components:

stock number or reference number. This index is an ascending FSN sequence followed by a reference numbers in alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

(2) Using the repair parts listing, find the assembly group of the repair part and the illustration figure number and item number referenced in the Index of Federal Stock Numbers and Reference Numbers.

6. Recommendations for Maintenance Publications Improvements

You can improve this manual by calling attention to errors and by recommending improvements using DA Form 2028 (Recommended Changes to Publications) or by a letter, and mailing it to Commanding General, U.S. Army Maintenance Equipment Command, ATTN: AMSME, 4300 Goodfellow Boulevard, St. Louis, Mo.

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-25B, (qty rqr block no. 422)
Organizational maintenance requirements for Heaters, Bituminous.

SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALW			
					(a)	(b)	(c)	(d)
					1-5	6-20	21-50	51-100
		REF NUMBER & MFR CODE	USABLE ON CODE					
		SECTION III - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE						
		GROUP 01 - ENGINE, ENGINE MOUNT, FUEL TANK, COUPLING, SHAFT, AND COLLAR						
PA02Z	5305-068-0502	SCREW, CAP, HEXAGON HEAD; ENGINE MTG MS90725-6 (96906)		EA 12	•	•	•	•
PA02Z	5310-582-5965	WASHER, FLAT; ENGINE MTG SCREW MS35338-44 (96906)		EA 12	•	•	•	•
PA02Z		SCREW, CAP, HEXAGON HEAD; TAILPIPE MTG MS90726-6 (96906)		EA 2	•	•	•	•
PA02Z	5310-582-5965	WASHER, FLAT; TAILPIPE MTG SCREW MS35338-44 (96906)		EA 2	•	•	•	•
XB02Z		TAILPIPE; ENGINE EXHAUST 19012DZ000 (15277)		EA 1				
PA02Z	2805-068-7510	ENGINE, GASOLINE 1A08 (97403)		EA 1	•	•	•	•
PA02Z	5305-269-3211	SCREW, CAP, HEXAGON HEAD; ENGINE MOUNT MTG MS90725-60 (96906)		EA 4	•	•	•	•
PA02Z	5310-637-9541	WASHER, FLAT; ENGINE MOUNT MTG SCREW MS35338-46 (96906)		EA 4	•	•	•	•
XB02Z		MOUNT; ENGINE 13219E3377 (97403)		EA 2				
PA02Z		FITTING, HOSE; BRASS 30182-2-4B (30780)		EA 1	•	•	•	•
PA02Z	4720-913-5910	HOSE, RUBBER, FUEL MILH13444TYPE1 (81348)		EA 1	•	•	•	•
PA02Z		FITTING, HOSE; BRASS 3018-2-4B (30780)		EA 1	•	•	•	•
PA02Z	5310-761-6882	NUT, HEXAGON; HOLDDOWN BAR MTG SCREW MS51967-2 (96906)		EA 4	•	•	•	•
PA02Z	5310-582-5965	LOCKWASHER; HOLDDOWN BAR MTG SCREW MS35338-44 (96906)		EA 4	•	•	•	•
XB02Z		BAR, TANK, HOLDDOWN 19012Z076 (15277)		EA 2				
PA02Z	5305-225-3839	SCREW, CAP, HEXAGON HEAD; HOLDDOWN BAR MS90725-8 (96906)		EA 4	•	•	•	•
PA02Z	2910-451-8060	CAP, GASOLINE TANK 426 (00165)		EA 1	•	•	•	•
XB00F		TANK, GASOLINE 804 (00165)		EA 1				
PA02Z	3010-426-0660	COUPLING, FLEXIBLE 20TD31 (21444)		EA 1	•	•	•	•
XB02Z		COLLAR, SHAFT SC3-4 (71176)		EA 1				
XB02Z		SHAFT, EXTENSION 1901ZZ069 (15277)		EA 1				
		GROUP 02 - GEAR REDUCER, CLUTCH AND SHIFTER LEVER, PUMP, AND PUMP BRACKET						
PA02Z	5310-880-7722	NUT, HEXAGON; GEAR REDUCER MTG STUD		EA 4	•	•	•	•

(1) MR NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE DN CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
022	5310-407-9566	WASHER, LOCK; GEAR REDUCER MTG STUD NUT M635338-45 (96906)	EA	4	•	•	•	•	2	2
022	3020-422-9715	REDUCER, GEAR 467705 (24617)	EA	1	•	•	•	•	2	3
022		PLUG, OIL LEVEL 59529 (24617)	EA	1	•	•	•	•	2	30
022	5365-477-0327	PLUG, GREASE 52152 (24617)	EA	1	•	•	•	•	2	31
022		PLUG, DRAIN 51309 (24617)	EA	1	•	•	•	•	2	32
022		PLUG, VENT 152058 (24617)	EA	1	•	•	•	•	2	33
022	4730-287-1649	ELBOW, PIPE, STREET; GEAR REDUCER, 90 DEG, 1/8 NPT M635230-1 (96906)	EA	2	•	•	•	•	2	34
022		PLUG, DRAIN 51309 (24617)	EA	1	•	•	•	•	2	35
022		NUT, HEXAGON; CLUTCH LEVER MTG SCREW M651988-8 (96906)	EA	1	•	•	•	•	3	1
022	5310-637-9541	WASHER, LOCK; LEVER MTG SCREW M635338-46 (96906)	EA	1	•	•	•	•	3	2
022		WASHER, FLAT; LEVER MTG SCREW M627183-15 (96906)	EA	4	•	•	•	•	3	3
022		SPACER; LONG, LEVER MTG SCREW MANUFACTURE FROM	EA	1					3	4
022	4710-277-7866	PIPE, STEEL, 1/2 IN. ID, 2 1/2 IN. REQUIRED	EA		•	•	•	•	3	
022		SPACER; SHORT, LEVER MTG SCREW MANUFACTURE FROM	EA	1					3	5
022	4710-277-7866	PIPE, STEEL, 1/2 IN. ID, 2 IN. REQUIRED	EA		•	•	•	•	3	
			EA	1	•	•	•	•	3	6
			EA	1					3	7
			EA	1	•	•	•	•	3	8
			EA	3					3	9
			EA	3					3	10
			EA	1					3	11
			EA	1					3	12
			EA	1					3	13
			EA	1					3	14
			EA	1					3	15

SVR CODE	FEDERAL STOCK NUMBR	DESCRIPTION	USABLE DN CODE	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALW					(e) FI NI
						(a)	(b)	(c)	(d)		
						1-5	6-20	21-50	51-100		
REF NUMBER & MFR CODE											
XAOZZ		DISC, FRICTION 235303 (24617)		EA	1						
XAOZZ		PLATE, PRESSURE 235306 (24617)		EA	1						
XAOZZ		WASHER, THRUST 235312 (24617)		EA	1						
XAOZZ		SLEEVE, ACTUATING 235311 (24617)		EA	1						
XAOZZ		CAM AND SLIP RING ASSEMBLY 235313 (24617)		EA	1						
XAOZZ		BALL, ACTUATING 431005 (24617)		EA	19						
XAOZZ		WASHER, BELLEVILLE 235309 (24617)		EA	1						
XAOZZ		CASE, DUST SEAL 235326 (24617)		EA	1						
XAOZZ		ELEMENT, DUST SEAL 235325 (24617)		EA	1						
XAOZZ		SLEEVE, ADJUSTING 235307 (24617)		EA	1						
XAOZZ		SETSCREW, ADJUSTING 400656 (24617)		EA	2						
PAOZZ	5305-782-9495	SCREW, CAP, HEXAGON HEAD; PUMP MTG MS90725-111 (96906)		EA	4	*	*	*	*	*	
PAOZZ	5310-584-5272	LOCKWASHER; PUMP MTG SCREW MS35338-48 (96906)		EA	4	*	*	*	*	*	
PAOZZ	5310-880-7744	NUT, HEXAGON; PUMP BRACKET MTG MS51967-5 (96906)		EA	4	*	*	*	*	*	
PAOZZ	5310-407-9566	WASHER, FLAT; PUMP BRACKET MTG MS35388-45 (96906)		EA	4	*	*	*	*	*	
XBOZZ		BRACKET, PUMP 304182 (01942)		EA	1						
PAOFF		PUMP, ASPIRANT 100R (01942)		EA	1	*	*	*	*	*	
		GROUP 03 - PUMP AND GEARBOX BASE AND MOUNTING PLATE									
PAOZZ	5305-964-0119	SCREW, TAPPING, THREAD CUTTING; INSTRUCTION PLATE MTG MS24629-10 (96906)		EA	4	*	*	*	*	*	
PAOZZ		PLATE, INSTRUCTION; PUMP DISCHARGE VALVE 13219E3381 (97403)		EA	1	*	*	*	*	*	
PAOZZ		SCREW, DRIVE; PLATE MTG AN535-6-4 (88044)		EA	4	*	*	*	*	*	
XBOZZ		PLATE, TRANSPORTATION; HEATING KETTLE 1901222063 (15277)		EA	1						
		GROUP 04 - VALVES, FITTINGS, HOSE ASSEMBLIES, AND THERMOMETER									
PAOZZ	4730-278-4774	ELBOW, UNION; 90 DEG, 1 IN. NPT 1282 (14959)		EA	1	*	*	*	*	*	
PAOZZ		HOSE ASSEMBLY, FLEXIBLE 13219E3380 (96906)		EA	1	*	*	*	*	*	

SMR CODE	STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	MAINTENANCE ALW				TRACTION	
						(a)	(b)	(c)	(d)	(a)	(b)
		REF NUMBER & MFR CODE				1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
PA02Z	4730-187-7599	COUPLING, STRAIGHT; 1 IN. NPT WMP521 (81348)		EA	1	*	*	*	*	6	3
PA02Z	4730-288-7180	NIPPLE, PIPE: 1 IN. NPT, 8 IN. LG, STEEL WMP351 (81348)		EA	1	*	*	*	*	6	4
PA02Z		NIPPLE, PIPE: 1 IN. NPT, 5 1/2 IN. LG, STEEL MS51953-131 (96906)		EA	1	*	*	*	*	6	5
XB02Z		PLATE, FLOW INDICATOR; VALVE 1901222087 (15277)		EA	1					6	6
XB02Z		HANDLE, VALVE 605 (29215)		EA	1					6	7
XB02Z		RING, STOP; VALVE 1546C (29215)		EA	1					6	8
PA02Z		VALVE, 3-WAY: 1 IN. NPTIF, 3 PORT FIG605-1 (29215)		EA	1	*	*	*	*	6	9
PA02Z	4730-196-2059	NIPPLE, CLOSE; 1 IN. NPT, STEEL MS51953-121 (96906)		EA	1	*	*	*	*	6	10
PA02Z	4730-221-5011	ELBOW, STREET: 90 DEG, 1 IN. NPT, STEEL MS51952-6 (96906)		EA	1	*	*	*	*	6	11
PA02Z	4730-196-1556	NIPPLE, PIPE: 1 IN. NPT, 5 IN. LG, STEEL WMP351 (81348)		EA	1	*	*	*	*	6	12
PA02Z	4730-189-2599	UNION, CLOSED: 1 IN. NPT, STEEL FIG463 (26403)		EA	1	*	*	*	*	6	13
PA02Z		HOSE ASSEMBLY, FLEXIBLE FIG341-4 (41592)		EA	1	*	*	*	*	6	14
PA02Z		VALVE, DRAIN: 1 1/2 IN. NPT 4 (70142)		EA	1	*	*	*	*	6	15
PA02Z	4730-277-8891	NIPPLE, PIPE: 1 1/2 IN. NPT, 3 IN. LG, STEEL MS51953-172 (96906)		EA	1	*	*	*	*	6	16
PA02Z		PLATE, FLOW INDICATOR; VALVE 1901222087 (15277)		EA	1					6	17
PA02Z		HANDLE, VALVE 605 (29215)		EA	1					6	18
PA02Z		RING, STOP; VALVE 1546C (29215)		EA	1					6	19
PA02Z		VALVE, 3-WAY: 1 1/2 IN. NPT, 3 PORT FIG605-1-1-2 (29215)		EA	1	*	*	*	*	6	20
PA02Z	4730-054-2027	NIPPLE, PIPE: 1 1/2 IN. NPT, 9 IN. LG, STEEL MS51953-181 (96906)		EA	1	*	*	*	*	6	21
PA02Z	6685-236-9089	THERMOMETER 30-6360BHTS12 (38056)		EA	1	*	*	*	*	6	22
PA02Z	4730-231-5654	REDUCER, PIPE: 1 IN. NPT X 3/4 IN. NPT, STEEL MS39232-9 (96906)		EA	1	*	*	*	*	6	23
PA02Z		NIPPLE, PIPE: 1 IN. NPT, 8 IN. LG, STEEL MS51953-134 (96906)		EA	1	*	*	*	*	6	24
PA02Z		GROUP 05 - HAND SPRAY ATTACHMENT AND FLEXIBLE HOSE									
PA02Z		HOSE, FLEXIBLE: SPRAY BAR, 1 IN. ID, 15 FT LG FIG341-15 (41502)		EA	1	*	*	*	*	7	1

SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALW					IL TRA
						(a)	(b)	(c)	(d)	(e)	
						1-5	6-20	21-50	51-100	FIG. NO.	
PA00F		HAND SPRAY ATTACHMENT 19012CZ000 (15277)		EA	1	•	•	•	•	7	
PA02Z	4730-231-2412	CAP, PIPE; HAND SPRAY, 3/4 IN. STEEL WMP51 (81348)		EA	1	•	•	•	•	7	
PA02Z		NOZZLE, SPRAY; VEE-JET H3-8U50120 (82247)		EA	2	•	•	•	•	7	
XB02Z		SPRAY BAR WELOMENT 19012CB000 (15277)		EA	1					7	
PA02Z		HANDLE ASSEMBLY; SPRAY BAR 19012CA000GP2 (15277)		EA	1	•	•	•	•	7	
PA02Z	5310-088-1251	NUT, HEXAGON; HANDLE ROD MTG SCREW MS51922-1 (96906)		EA	1	•	•	•	•	7	
PA02Z	5310-809-4058	WASHER, FLAT; HANDLE ROD MTG SCREW MS27183-10 (96906)		EA	1	•	•	•	•	7	
XB02Z		ROD, HANDLE 19012CA005 (15277)		EA	1					7	
PA02Z	5310-809-4058	WASHER, FLAT; HANDLE ROD MTG SCREW MS27183-10 (96906)		EA	1	•	•	•	•	7	
PA02Z	5305-226-7234	SCREW, CAP, HEXAGON HEAD; HANDLE ROD MTG MS90725-26 (96906)		EA	1	•	•	•	•	7	
XB02Z		BRACKET, HANDLE 19012CA001-2 (15277)		EA	1					7	
PA02Z		VALVE, BALL FIG700-5B3-4 (37239)		EA	1	•	•	•	•	7	
PA02Z	5310-761-6882	NUT, HEXAGON; HANDLE BRACKET MTG, U-BOLT MS51967-2 (96906)		EA	2	•	•	•	•	7	
PA02Z	5310-582-5965	WASHER, LOCK; HANDLE BRACKET MTG, U-BOLT MS35338-44 (96906)		EA	2	•	•	•	•	7	
PA02Z		U-BOLT; HANDLE BRACKET MTG 19012CZ009 (15277)		EA	1	•	•	•	•	7	
XB02Z		PIPE, EXTENSION; SPRAY BAR 19012CZ002 (15277)		EA	1					7	
PA02Z		HANDLE ASSEMBLY; SPRAY BAR 19012CA000GP1 (15277)		EA	1	•	•	•	•	7	
PA02Z	5310-081-1251	NUT, HEXAGON; HANDLE ROD MTG SCREW MS51922-1 (96906)		EA	1	•	•	•	•	7	
PA02Z	5310-809-4058	WASHER, FLAT; HANDLE ROD MTG SCREW MS27183-10 (96906)		EA	1	•	•	•	•	7	
XB02Z		ROD, HANDLE 19012CA005 (15277)		EA	1					7	
PA02Z	5310-809-4058	WASHER, FLAT; HANDLE ROD MTG SCREW MS27183-10 (96906)		EA	1	•	•	•	•	7	
PA02Z	5305-226-7234	SCREW, CAP, HEXAGON HEAD; HANDLE ROD MTG MS90725-26 (96906)		EA	1	•	•	•	•	7	
XB02Z		BRACKET, HANDLE 19012CA001-1 (15277)		EA	1					7	

(1) SNR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				F
					(a)	(b)	(c)	(d)	
					1-5	6-20	21-50	51-100	
		REF NUMBER & MFR CODE							
		GROUP 06 - FUEL TANK, PRESSURE GAGE, AIR PUMP, VALVES, LINES AND FITTINGS							
PAOZZ		PET COCK: AIR BLEED DC601-2 (93061)	EA	1	*	*	*	*	
XBOZZ		REDUCER, PIPE: PET COCK MTG, 1/2 IN. NPTFX X 3/4 IN. NPTM 2090S12S8 (93061)	EA	1					
PAOZZ		CAP, PRESSURE RELEASE: FUEL TANK 1901ZE2000 (15277)	EA	1	*	*	*	*	
PAOZZ	4730-192-1472	NIPPLE, PIPE: CLOSED, 2 IN. NPT WVN351 (81348)	EA	1	*	*	*	*	
PAOZZ	4820-451-4654	VALVE, POP OFF: FUEL TANK, 55 PSI, 1/2 IN. NPT, BRASS 214598 (38056)	EA	1	*	*	*	*	
PAOZZ		GAGE, PRESSURE: FUEL TANK, 0 TO 60 PSI, 2 1/2 IN. DIAL 8197882 (73475)	EA	1	*	*	*	*	
XBOZZ		NUT, LONG FLARE: TUBING, 1/4 IN. BRASS 41FS4 (93061)	EA	1					
XBOZZ		ADAPTER, PIPE: FLARED NUT 48F4-4 (93061)	EA	2					
XBOZZ		TEE, PIPE: PRESSURE GAGE 2203P4 (93061)	EA	1					
PAOZZ		CONNECTOR, PIPE, STRAIGHT: PRESSURE GAGE MTG, 1/4 IN. TUBE X 1/4 IN. PIPE 48FS4-4 (93061)	EA	1	*	*	*	*	
XBOZZ		NUT, LONG FLARE: TUBING, 1/4 IN. BRASS 41FS4 (93061)	EA	1					
XBOZZ		TUBING, COPPER: TEMPERATURE CONTROL TO PRESSURE GAGE, 1/4 IN. X .030 WALL, 20 IN. LG 1901ZZ2007-3 (15277)	EA	1					
XBOZZ		ADAPTER, PIPE: FLARED NUT 48F4-4 (93061)	EA	1					
PAOZZ		CONNECTOR, PIPE, STRAIGHT: TUBE MTG, 1/4 IN. TUBE X 1/4 IN. PIPE 48FS4-4 (93061)	EA	1	*	*	*	*	
PAOZZ	9310-422-2560	NUT, LONG FLARE: TUBING, 1/4 IN. BRASS 41FL4 (93061)	EA	2	*	*	*	*	
PAOZZ		TUBING, COPPER: FUEL TANK TO VALVE 1901ZZ2007-1 (15277)	EA	1	*	*	*	*	
PAOZZ		CONNECTOR, PIPE, STRAIGHT: TUBE TO VALVE, 1/4 IN. TUBE X 1/4 IN. PIPE 48FS4-4 (93061)	EA	2	*	*	*	*	
PAOZZ		VALVE, GLOBE: FUEL TANK, 1/4 IN. NPT, BRASS 401-6 (15277)	EA	1	*	*	*	*	

SYM CODE	FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				16 F10
					(a)	(b)	(c)	(d)	
					1-5	6-20	21-50	51-100	
REF NUMBER & MFR CODE			USABLE ON CODE						
PA0ZZ	5310-422-2560	NUT, LONG FLARE; TUBING, 1/4 IN., BRASS 41FL4 (93061)		EA	2	*	*	*	*
PA0ZZ		TUBING, COPPER; VALVE TO TEMPERATURE CONTROL 1901ZZZ007-2 (15277)		EA	1	*	*	*	*
XB0ZZ		CONNECTOR, PIPE, STRAIGHT: TUBE TO TEMPERATURE CONTROL 48F54-4 (93061)		EA	1				
XB0ZZ		HOSE ASSEMBLY, TORCH; HAUCH MOL WHD34 14982x6 (27695)		EA	1				
XB0ZZ		BUSHING, PIPE; HOSE ASSEMBLY 209PS8-4 (93061)		EA	1				
XG0ZZ		NIPPLE, PIPE; HOSE ASSEMBLY 216P4 (93061)		EA	1				
XB0ZZ		ELBOW, PIPE; TEMPERATURE CONTROL 1202PS4-4 (93061)		EA	1				
XB0ZZ		BUSHING, PIPE; HOSE ASSEMBLY 209PS8-4 (93061)		EA	1				
XG0ZZ		NIPPLE, PIPE; HOSE ASSEMBLY 216P4 (93061)		EA	1				
XB0ZZ		ELBOW, PIPE; BURNER ASSEMBLY 202PS4-4 (93061)		EA	1				
PA0ZZ	4730-905-2692	COUPLING, PIPE; THERMOCOUPLE MTG MS39233-5 (96906)		EA	1	*	*	*	*
PA0ZZ	4730-288-6983	NIPPLE, PIPE; THERMOCOUPLE MTG MS51953-111 (96906)		EA	1	*	*	*	*
PA0ZZ	5310-982-4938	NUT, SQUARE; TEMPERATURE CONTROL ASSEMBLY MTG, 1/4-20 THD SIZE MS27040-10 (96906)		EA	2	*	*	*	*
PA0ZZ	5310-582-5665	LOCKWASHER; TEMPERATURE CONTROL ASSEMBLY MTG SCREW, 1/4 IN. MS35338-44 (96906)		EA	2	*	*	*	*
PA0ZZ	5305-988-1727	SCREW, PAN HEAD; TEMPERATURE CONTROL ASSEMBLY MTG, 1/4-20 UNC X 1 IN. LG MS35206-283 (96906)		EA	2	*	*	*	*
PA0ZZ	4320-451-2729	PUMP, AIR, HAND; FUEL TANK, 2 IN. SIZE 49 (70142)		EA	1	*	*	*	*
XB0ZZ		PLATE, CAUTION; FUEL TANK 1901ZZZ088 (15277)		EA	1				
PA0ZZ	5310-880-7744	NUT, HEXAGON; FUEL TANK MTG SCREW, 5/16-18 NC MS51967-5 (96906)		EA	4	*	*	*	*
PA0ZZ	5310-407-9566	LOCKWASHER; FUEL TANK MTG SCREW, 5/16 IN. MS35338-45 (96906)		EA	4	*	*	*	*
PA0ZZ	5310-225-8499	SCREW, CAP, HEXAGON HEAD; FUEL TANK MTG, 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	4	*	*	*	*
XB0ZZ		TANK, FUEL, PRESSURIZED 1901FZZ000 (15277)		EA	1				
PA0ZZ	4730-221-2137	PLUG, PIPE; FUEL TANK DRAIN, 1/4 IN. NPT 400012 OF 400006		EA	2	*	*	*	*

		GROUP 07 - TEMPERATURE CONTROL ASSEMBLY							
PA00F	6685-405-1695	CONTROL ASSEMBLY, TEMPERATURE GWSSJ369AS8 (45809)	EA	1	*	*	*	*	*
PA0ZZ		KNOB: TEMPERATURE CONTROL ZC26 (45809)	EA	1	*	*	*	*	*
PA0ZZ	5305-984-6213	SCREW, CAP: COVER MTG MS35206-266 (96906)	EA	4	*	*	*	*	*
XB0ZZ		COVER: TEMPERATURE CONTROL GWS10F (45809)	EA	1					
PA0ZZ		GASKET, COVER: TEMPERATURE CONTROL GWS4 (45809)	EA	1	*	*	*	*	*
XB0ZZ		SCREW, CAP, HEXAGON HEAD SLOTTED: FLANGE MTG L98 (45809)	EA	2					
XB0ZZ		O RING: FLANGE ACC165 (45809)	EA	1					
XB0ZZ		FLANGE, ELEMENT L4F (45809)	EA	1					
PA0ZZ	6685-257-0188	ELEMENT, THERMOCOUPLE 445KLP110-5 (45809)	EA	1	*	*	*	*	*
XA0ZZ		STUFFING BOX 3-4-21T105 (45809)	EA	1					
PA0ZZ	5305-638-4027	SCREW, MACHINE: ROUNDHEAD, VALVE MTG 5800-30-31 (31741)	EA	4	*	*	*	*	*
PA0ZZ	5310-045-3296	LOCKWASHER: VALVE MTG MS35338-13 (96906)	EA	4	*	*	*	*	*
XA0ZZ		VALVE ASSEMBLY: TEMPERATURE CONTROL GWSSJ369S2 (45809)	EA	1					
XA0ZZ		MECHANISM ASSEMBLY: TEMPERATURE CONTROL GWSSJ369S6 (45809)	EA	1					
PA0ZZ	5305-059-4568	SCREW, MACHINE: FLATHEAD, RELIEF VALVE MTG MS35190-253 (96906)	EA	2	*	*	*	*	*
XB0ZZ		VALVE ASSEMBLY, RELIEF GWSSJ369S7 (45809)	EA	1					
XA0ZZ		ADAPTER 120B (45809)	EA	1					
PA0ZZ	5305-253-5612	SCREW, DRIVE: PLATE MTG AN535-2-4 (88044)	EA	2	*	*	*	*	*
XB0ZZ		PLATE, RATING: TEMPERATURE CONTROL 40-108 (45809)	EA	1					
XA0ZZ		CASE: TEMPERATURE CONTROL GWSSJ369-11 (45809)	EA	1					
		GROUP 08 - BURNER ASSEMBLY							
XB0ZZ		CONNECTOR, PIPE, STRAIGHT: BURNER VALVE, 1/4 IN NPT 2083-4-4S (00624)	EA	1					

(1)	(2)	(3)	(4)	(5)	(6)				(7)	
SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				(e) FIG. NO.
						(a)	(b)	(c)	(d)	
		REF NUMBER & MFR CODE				1-5	6-20	21-50	51-100	
XBOZZ		ELBOW, PIPE, STREET; 90 DEG, BURNER VALVE, 1/4 IN. NPTF, 1/4 IN. NPTM 1-4C05 (93061)		EA	1					10
XBOZZ		NIPPLE, PIPE; BURNER VALVE, 1/4 IN. NPT 2084-457-8 (00624)		EA	1					10
PAOFF		BURNER ASSEMBLY WHO34 (27695)		EA	1	*	*	*	*	10
XBOZZ		VALVE; BURNER WHD2 (27695)		EA	1					10
		GROUP 09 - INTERVEHICULAR CABLE, LIGHTS, REFLECTORS AND WIRING HARNESS								
PAOZZ	2590-038-3914	CABLE ASSEMBLY, INTERVEHICULAR 7728811 (19207)		EA	1	*	*	*	*	11
PAOZZ	5310-761-6882	NUT, HEXAGON; RECEPTACLE AND COVER MTG SCREW MS51967-2 (96906)		EA	4	*	*	*	*	11
PAOZZ	5310-582-5965	LOCKWASHER; RECEPTACLE AND COVER MTG SCREW MS35338-44 (96906)		EA	4	*	*	*	*	11
PAOZZ	5305-225-3839	SCREW, CAP, HEXAGON HEAD; RECEPTACLE AND COVER MTG MS90725-8 (96906)		EA	4	*	*	*	*	11
XBOZZ		RECEPTACLE; ELECTRICAL MS75021-1 (96906)		EA	1					11
XBOZZ		COVER, RECEPTACLE; ELECTRICAL 7731428 (77820)		EA	1					11
PAOZZ	5305-253-5622	SCREW, DRIVE; REFLECTOR MTG MS21318-41 (96906)		EA	4	*	*	*	*	11
XBOZZ		REFLECTOR, RED MS35387-1 (96906)		EA	4					11
XBOZZ		REFLECTOR, AMBER MS35387-2 (96906)		EA	4					11
PAOZZ	5310-761-6882	NUT, HEXAGON; CLAMP MTG SCREW MS51967-2 (96906)		EA	2	*	*	*	*	11
XBOZZ		CLAMP, CONDUIT 920 (82059)		EA	2					11
PAOZZ	5305-988-1725	SCREW, MACHINE; CLAMP MTG MS35206-281 (96906)		EA	2	*	*	*	*	11
XBOZZ		CONDUIT, STEEL; THIN WALL, 1/2 IN. OIA, 78 IN. LG 1-2ENT (89481)		IN	78					11
XBOZZ		TUBING, PLASTIC; 1/2 IN. OIA, 72 IN. LG 217831 (81348)		IN	72					11
PAOZZ	5310-934-9751	NUT, HEXAGON; LIGHT MTG SCREW MS35650-302 (96906)		EA	78	*	*	*	*	11
PAOZZ	5310-045-3296	LOCKWASHER; LIGHT MTG SCREW MS35338-43 (96906)		EA	78	*	*	*	*	11
PAOZZ	5305-616-4831	SCREW, MACHINE; LIGHT MTG MS35266-65 (96906)		EA	78	*	*	*	*	11
PAOZZ	6220-727-3288	LIGHT, MARKER; RED, 24 VOLTS MS21424-2 (96906)		EA	4	*	*	*	*	11

PAOZZ	6220-726-1916	LIGHT, MARKER; REQ, 24 VOLTS MS35423-2 (96906)	EA	7	*	*	*	*	11	19
PAOZZ	6240-019-0877	LAMP; BLACKOUT, STOP AND TURN SIGNAL MS15570-1251 (96906)	EA	2	*	*	*	*	11	20
PAOZZ	6240-295-1184	LAMP; STOP AND TAILLIGHT 1034 (08806)	EA	1	*	*	*	*	11	21
PAOZZ	6220-577-3434	LIGHT, MARKER; AMBER, 24 VOLTS MS35423-1 (96906)	EA	4	*	*	*	*	11	22
PAOZZ	6220-577-3435	LIGHT, MARKER; AMBER, 24 VOLTS MS35424-1 (96906)	EA	4	*	*	*	*	11	23
PAOZZ	6220-465-0310	LIGHT, STOP-TURN 0433 (81834)	EA	2	*	*	*	*	11	24
PAOZZ	6220-337-6471	LIGHT, STOP-TURN MS51330-1 (96906)	EA	2	*	*	*	*	11	25
BOZZ		CONNECTOR ASSEMBLY MS27144-1 (96906)	EA	18					11	26
BOZZ		CONNECTOR ASSEMBLY MS27142-2 (96906)	EA	6					11	27
PAOZZ	5935-925-6494	TERMINAL MS27148-1 (96906)	EA	2	*	*	*	*	11	28
BOZZ		BOARD, TERMINAL 601-4 (75382)	EA	2					11	29
BOZZ		BOX, JUNCTION 1901MZZ007 (15277)	EA	1					11	30
ACOF		HARNES, WIRING 1901MAZ000 (15277)	EA	1	*	*	*	*	11	31
BOZZ		WIRE ASSEMBLY 1901MBZ000-1 (15277)	EA	2					11	32
BOZZ		WIRE ASSEMBLY 1901MBZ000-2 (15277)	EA	2					11	33
BOZZ		WIRE ASSEMBLY, GROUND 1901MCZ000 (15277)	EA	2					11	34
BOZZ		WIRE ASSEMBLY 1901MDZ000-1 (15277)	EA	3					11	35
BOZZ		WIRE ASSEMBLY 1901MDZ000-2 (15277)	EA	1					11	36
BOZZ		WIRE ASSEMBLY 1901MBZ000-3 (15277)	EA	2					11	37
BOZZ		WIRE ASSEMBLY 1901MBZ000-4 (15277)	EA	2					11	38
BOZZ		WIRE ASSEMBLY 1901MDZ000-5 (15277)	EA	2					11	39
BOZZ		WIRE ASSEMBLY 1901MDZ000-6 (15277)	EA	1					11	40
BOZZ		ADAPTER, CONNECTOR MS27147-1 (96906)	EA	15					11	41
BOZZ		BREAKER, CIRCUIT 30056-30STK (13445)	EA	3					11	42

SWD CODE	FEDERAL STOCK NUMBER	DESCRIPTION	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW					FIG. NO.	TR
					(a)	(b)	(c)	(d)	(e)		
					1-5	6-20	21-50	51-100			
		REF NUMBER & MFR CODE	USABLE OR CODE								
		GROUP 10 - SPRING, HANGER ASSEMBLIES, SPRING AND AXLE CLAMP AND U-BOLT									
PAOZZ	4730-172-0034	FITTING, LUBRICATION MS15003-6 (96906)		EA	2	*	*	*	*		12
PAOZZ	5315-839-5822	PIN, COTTER; SHACKLE BOLT MTG MS24665-353 (96906)		EA	2	*	*	*	*		12
PAOZZ	5310-850-6884	NUT, SHACKLE BOLT MS35692-15 (22938)		EA	2	*	*	*	*		12
PAOZZ	5306-136-9800	BOLT, SHACKLE; 9/16-18 UF X 3 7/8 IN. LG 5402-2 (22938)		EA	2	*	*	*	*		12
PAOZZ	5315-839-5822	PIN, COTTER; RIVET MTG, 1/8 X 1 IN. MS24665-353 (96906)		EA	2	*	*	*	*		12
XBOZZ		RIVET; ROUNDHEAD, 9/16 IN. DIA X 3 IN. LG 5403-1 (22938)		EA	2						12
		GROUP 11 - WHEEL, AXLE AND HUB ASSEMBLIES									
PCOZZ	2610-678-1363	TIRE; 700 X 16 MS35388-93 (96906)		EA	2	*	*	*	*		13
PCOZZ	2610-269-7332	TUBE, TIRE; 700 X 16 MS35292-8 (96906)		EA	2	*	*	*	*		13
PAOZZ	5310-732-0560	NUT, STUD; WHEEL MTG, 1/2-20 THO SIZE MS51968-14 (96906)		EA	10	*	*	*	*		13
PAOZZ	5310-584-5272	LOCKWASHER; WHEEL MTG, 1/2 IN. MEDIUM PLAIN MS35338-48 (96906)		EA	10	*	*	*	*		13
XBOZZ		WHEEL ASSEMBLY; 700 X 16 7387807 (00000)		EA	2						13
XBOZZ		CAP, GREASE 6312 (22938)		EA	2						13
PBOFF		AXLE ASSEMBLY; WHEEL 1-2006 (22938)		EA	1	*	*	*	*		13
PAOZZ	5315-285-7161	PIN, COTTER; SPINDLE NUT, 1/8 X 2 IN. MS24665-377 (96906)		EA	2	*	*	*	*		13
PAOZZ		NUT, SPINDLE 4600-2 (22938)		EA	2	*	*	*	*		13
PAOZZ	2530-455-1180	COLLAR, GREASE 6316 (22938)		EA	2	*	*	*	*		13
XBOZZ		BEAM, AXLE 2006-21 (22938)		EA	1						13
PAOZZ		WASHER, SPINDLE 4702-5 (22938)		EA	2	*	*	*	*		13
PAOZZ		BEARING CONE, OUTER 6058 (22938)		EA	2	*	*	*	*		13
PAOZZ	3110-224-9644	BEARING CONE, INNER 6057 (22938)		EA	2	*	*	*	*		13
PAOZZ		SEAL, GREASE 6311 (22938)		EA	2	*	*	*	*		13
PAOZZ	2530-455-1181	HUB ASSEMBLY, WHEEL		EA	2	*	*	*	*		13

SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION REF NUMBER & MFR CODE	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW				ILLUS- TRATION	
					(a)	(b)	(c)	(d)	(a)	(b)
					1-5	6-20	21-50	51-100	FIG NO	ITEM NO
BOZZ		HUB, STUD AND CUP ASSEMBLY 3603-1 (22938)	EA	2					13	17
AOZZ		BEARING CUP, OUTER 6151 (22938)	EA	2	*	*	*	*	13	18
AOZZ		BEARING CUP, INNER 6152 (22938)	EA	2	*	*	*	*	13	19
AOZZ		STUD, WHEEL 6251-3 (22938)	EA	10	*	*	*	*	13	20
BOZZ		HUB: WHEEL 3603 (22938)	EA	2					13	21
		GROUP 12 - TANK, LID, SUPPORT JACKS AND FRAME								
BOZZ		RACK: KETTLE TANK 1901JZZ000 (15277)	EA	1					14	1
AOZZ	5310-761-6882	NUT, HEXAGON; SEPARATOR PLATE MTG SCREW, 1/4-20 THD SIZE MS51967-2 (96906)	EA	3	*	*	*	*	14	2
AOZZ	5310-582-5965	LOCKWASHER: SEPARATOR PLATE MTG SCREW, 1/4 IN. MS35338-44 (96906)	EA	3	*	*	*	*	14	3
AOZZ	5305-225-3839	SCREW, CAP, HEXAGON HEAD; SEPARATOR PLATE MTG MS90725-8 (96906)	EA	3	*	*	*	*	14	4
BOFZ		PLATE, SEPARATOR: NUMBER 1 190122Z022 (15277)	EA	1					14	5
BOFZ		PLATE, SEPARATOR: NUMBER 2 1901C2Z000 (15277)	EA	1					14	6
AOZZ		CHAIN ASSEMBLY, COVER; SAFETY 13219E3384 (97403) MANUFACTURE FROM:	EA	1					14	7
AOZZ	4010-585-2108	CHAIN, 33 IN. REQUIRED	EA		*	*	*	*	14	
AOZZ	4030-869-1529	HOOK, 2 EA	EA		*	*	*	*	14	
AOZZ		PIN, QUICK RELEASE; TANK LID LG4ST625 (83014)	EA	1	*	*	*	*	14	8
AOZZ		LANYARD ASSEMBLY: QUICK RELEASE PIN LW1036-6 (83014)	EA	1	*	*	*	*	14	9
AOZZ	5310-761-6882	NUT, HEXAGON: TANK MTG SCREW, 1/4-20 THD SIZE MS51967-2 (96906)	EA	12	*	*	*	*	14	10
AOZZ	5310-582-5965	LOCKWASHER: TANK MTG SCREW MS35338-44 (96906)	EA	12	*	*	*	*	14	11
AOZZ	5305-225-3839	SCREW, CAP, HEXAGON HEAD; TANK MTG MS90725-8 (96906)	EA	12	*	*	*	*	14	12
AOZZ	5310-761-6882	NUT, HEXAGON: SAFETY STUD, 1/4-20 THD SIZE MS51967-2 (96906)	EA	2	*	*	*	*	14	13
AOZZ	5310-582-5965	LOCKWASHER: SAFETY STUD, 1/4 IN. MS51967-2 (96906)	EA	1	*	*	*	*	14	14
AOZZ		STUD; SAFETY, FUSIBLE SCREW, 1/4-20 THD SIZE, 1 1/2 IN. LG 1901EAC005 (15277)	EA	1	*	*	*	*	14	15

DESCRIPTION

SMR CODE	FEDERAL STOCK NUMBER	REF NUMBER & MFR CODE	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	15-DAY ORGANIZATIONAL MAINTENANCE ALLOW			
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100
PAJZZ	5310-761-6882	NUT, HEXAGON: TANK VENT MTG SCREW, 1/4-20 THD SIZE MS51967-2 (96906)		EA	4	*	*	*	*
PAOZZ	5310-582-5965	LOCKWASHER: TANK VENT MTG SCREW, 1/4 IN. MS35338-44 (96906)		EA	4	*	*	*	*
PAOZZ	5305-225-3839	SCREW, CAP, HEXAGON HEAD: TANK VENT MTG MS90725-8 (96906)		EA	4	*	*	*	*
XBOZZ		VENT, TANK 1901GZZ000 (15277)		EA	1				
PAOZZ	5310-761-6882	NUT, HEXAGON: BAFFLE MTG SCREW, 1/4-20 THD SIZE MS51967-2 (96906)		EA	12	*	*	*	*
PAOZZ	5310-582-5965	LOCKWASHER: BAFFLE MTG SCREW MS35338-44 (96906)		EA	12	*	*	*	*
PAOZZ	5305-225-3839	SCREW, CAP, HEXAGON HEAD: BAFFLE MTG MS90725-8 (96906)		EA	12	*	*	*	*
XBOZZ		BAFFLE, HEAT 1901ZZZ018 (15277)		EA	2				
XBOZZ		BAFFLE, HEAT 1901BZZ000-1 (15277)		EA	1				
XBOZZ		BAFFLE, HEAT 1901BZZ000-2 (15277)		EA	1				
XBOZZ		BAFFLE, HEAT 1901ZZZ048 (15277)		EA	1				
PAOZZ		CHOCK BLOCK ASSEMBLY TK16482 (03742)		EA	2	*	*	*	*
PAOZZ		PIN, QUICK RELEASE: JACK, CABLE ATTACHEO, 1/4 IN. OIA X 4 9/16 IN. LG BLN4-4-562 (84256)		EA	4	*	*	*	*
PAOZZ		JACK, SUPPORT: REAR 1901DZZ000-1 (15277)		EA	1	*	*	*	*
PAOZZ		JACK, SUPPORT: FRONT 1901DZZ000-2 (15277)		EA	1	*	*	*	*
PAOZZ		CHAIN ASSEMBLY, SAFETY 0212-0425 (80535)		EA	2	*	*	*	*
PAOZZ		COLD SHUT N01-1-4 (13743)		EA	2	*	*	*	*
PAOZZ	5305-253-5618	SCREW, DRIVE: PLATE MTG AN535-6-4 (88044)		EA	4	*	*	*	*
XBOZZ		PLATE, IDENTIFICATION 1901ZZZ062 (15277)		EA	1				
PAOZZ	5305-964-0119	SCREW, TAPPING, THREAD CUTTING: INSTRUCTION PLATE MTG MS24629-10 (96906)		EA	4	*	*	*	*
PAOZZ		PLATE, INSTRUCTION: TANK OUTLET VALVE 13219E33856 (97403)		EA	1	*	*	*	*

(1) SWR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY DS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPOT MAINT ALW PER 100 EQUIP EQJIP
					(a)	(b)	(c)	(a)	(b)	(c)		
					1-25	21-50	51-100	1-25	21-50	51-100		
PA022	5310-1107-9566	WASHER, LOCK; GEAR REDUCER MTG STD NUT MS35338-15 (96906)	EA	4	*	*	*	*	*	*	*	*
PA0FF	3020-422-9715	REDUCER, GEAR 467705 (24617)	EA	1	*	*	*	*	*	*	*	*
XAF22		SCREW, CAP, HEXAGON HEAD; HOUSING MTG 53852 (24617)	EA	8								
XAF22		LOCKWASHER; HOUSING MTG SCREW 50254 (24617)	EA	8								
XAF22		HOUSING, BEARING 79070-02A (24617)	EA	1								
XBF22		GASKET; HOUSING 602028-14A (24617)	EA	1								
XBF22		SEAL, OIL 150984 (24617)	EA	1								
XAF22		SLEEVE; OIL SEAL, OUTPUT SHAFT 411621-08B (24617)	EA	1								
XAF22		KEY, OUTPUT SHAFT 55592 (24617)	EA	1								
XBF22		BEARING, OUTPUT SHAFT 411626-01B (24617)	EA	1								
XAF22		SHIM; OIL SEAL 411623-01R (24617)	EA	1								
XAF22		SPACER, OUTPUT SHAFT 411622-08H (24617)	EA	1								
XBF22		BEARING, OUTPUT SHAFT 411626-010 (24617)	EA	1								
XAF22		SPACER, OUTPUT SHAFT 11622-08H (24617)	EA	1								
XBF22		GEAR, DRIVEN 602083-16 (24617)	EA	1								
XAF22		RING, LOCK 411637-02C (24617)	EA	1								
XBF22		SPACER, OUTPUT SHAFT 411622-08J (24617)	EA	1								
XBF22		SHAFT, OUTPUT 602088-01A (24617)	EA	1								
XAF22		SCREW, CAP, HEXAGON HEAD; BEARING CLAMP MTG MS90725-5 (96906)	EA	4								
XAF22		LOCKWASHER; BEARING CLAMP MTG SCREW 419009 (38740)	EA	4								
XAF22		CLAMP, BEARING 411625-10A (24617)	EA	1								
XBF22		KEY, PINION 51744 (24617)	EA	1								
XAF22		BEARING, PINION SHAFT 59863 (24617)	EA	1								
XAF22		SLEEVE, OIL SEAL 411621-07B (24617)	EA	1								
XBF22		SEAL, OIL, PINION 411620-21A (24617)	EA	1								
XAF22		BEARING, PINION 51928-10A (24617)	EA	1								

(1)	(2)	(3) DESCRIPTION	(4) USABLE ON CODE	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT AT LOWANCE	(7) 30 DAY GS MAINT ALLOWANCE	(8) 1-YR ALW PER 100 EQUIP CNTGY	(9) DEPT MAINT ALW PER 100 EQUIP
SUR CCODE	FEDERAL STOCK NUMBER	REF NUMBER & MFR CODE			(a) (b) (c)	(d) (e) (f)		
XBFZ		SHAFT, PINION; W/GEAR 602082-35 (24617)	EA	1				
PAOZZ		PLUG, OIL LEVEL 59529 (24617)	EA	1	*	*	*	*
PAOZZ	5365-477-0327	PLUG, GREASE 52152 (24617)	EA	1	*	*	*	*
PAOZZ		PLUG, DRAIN 51309 (24617)	EA	1	*	*	*	*
PAOZZ		PLUG, VENT 152058 (24617)	EA	1	*	*	*	*
PAOZZ	4730-287-1649	ELBOW, PIPE, STREET; GEAR REDUCER, 90 DEG, 1/8 NPT H539230-1 (96906)	EA	2	*	*	*	*
PAOZZ		PLUG, DRAIN 51309 (24617)	EA	1	*	*	*	*
XAFZ		SCREW, FOOT MOUNTING 53908 (24617)	EA	4				
XAFZ		WASHER, LOCK; FOOT MTG SCREW 58092 (24617)	EA	4				
XAFZ		FOOT, MOUNTING; GEAR REDUCER 79035-14A (24617)	EA	1				
XAFZ		GEAR CASE; GEAR REDUCER 86869-04A (24617)	EA	1				
PAOZZ		NUT, HEXAGON; CLUTCH LEVER MTG SCREW M51968-8 (96906)	EA	1	*	*	*	*
PAOZZ	5310-637-9541	WASHER, LOCK; LEVER MTG SCREW M53538-46 (96906)	EA	1	*	*	*	*
PAOZZ		WASHER, FLAT; LEVER MTG SCREW M527183-15 (96906)	EA	4	*	*	*	*
MOOZZ		SPACER; LONG, LEVER MTG SCREW MANUFACTURE FROM;	EA	1				
PAOZZ	4710-277-7866	PIPE, STEEL, 1/2 IN. ID, 2 1/2 IN. REQUIRED	EA		*	*	*	*
MOOZZ		SPACER; SHORT, LEVER MTG SCREW MANUFACTURE FROM;	EA	1				
PAOZZ	4710-277-7866	PIPE, STEEL, 1/2 IN. ID, 2 IN. REQUIRED	EA		*	*	*	*
PAOZZ		SCREW, CAP, HEXAGON HEAD; LEVER MTG 190122Z136 (15277)	EA	1	*	*	*	*
XBOZZ		LEVER W/HANDLE, SHIFT, CLUTCH FR3 (24617)	EA	1				
PAOZZ	3010-426-0662	CLUTCH 35ME (24617)	EA	1	*	*	*	*
XAOZZ		SCREW, CAP, HEXAGON HEAD; HUB MTG 416546 (24617)	EA	3				
XAOZZ		WASHER, LOCK; HUB MTG SCREW 419009 (24617)	EA	3				
XAOZZ		HUB, CLUTCH COUPLING H35E (24617)	EA	1				
XAOZZ		RING, DRIVE 235302 (24617)	EA	1				

Part Number	Description	Quantity	Unit	Material	Notes
XAF22	GLAND F22 (01942)	1	EA		
PAF22	5315-616-5522 KEY, WOODRUFF MS35756-12 (96906)	1	EA		
XAF22	PINION 10015 (01942)	1	EA		
XAF22	SHAFT: PINION 10014 (01942)	1	EA		
XAF22	ROTOR 10026 (01942)	2	EA		
XBF22	RING, PACKING F18AT (01942)	1	EA		
XBF22	BEARING, BRONZE F11A (01942)	1	EA		
XAF22	RING, RETAINING 10058 (01942)	1	EA		
XAF22	NUT, LOCK: ADJUSTING SCREW E64 (01942)	1	EA		
XAF22	SCREW, ADJUSTING 10055 (01942)	1	EA		
XBF22	GASKET E68 (01942)	1	EA		
XAF22	BONNET 10057 (01942)	1	EA		
XAF22	O RING, VALVE AN6227-213 (88044)	1	EA		
XAF22	SPRING 10054 (01942)	1	EA		
XAF22	POPPET 10051 (01942)	1	EA		
XAF22	RING, RETAINING 10058 (01942)	1	EA		
XAF22	O RING, VALVE AN6227-213 (88044)	1	EA		
XAF22	CAGE, VALVE 10050 (01942)	1	EA		
XAF22	O RING AN6227-213 (88044)	1	EA		
XBO22	PLUG: CASING 10063 (01942)	2	EA		
XAF22	CASING: PUMP 100R4 (01942)	1	EA		
	GROUP 03 - PUMP AND GEARBOX BASE AND MOUNTING PLATE				
AF22	5305-269-3211 SCREW, CAP, HEXAGON HEAD: PUMP AND GEARBOX BASE MTG MS90725-60 (96906)	4	EA		
AF22	5310-637-9541 LOCKWASHER: PUMP AND GEARBOX BASE MTG MS35338-46 (96906)	4	EA		
AF22	5310-761-6882 BASE, PUMP AND GEARBOX 13219E337B (97403)	1	EA		
AF22	NUT, HEXAGON: MTG PLATE MS51967-2 (96906)	6	EA		

SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30 DAY GS MAINT ALLOWANCE			30 DAY GS MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CHRG	DEPOT MAINT ALW PER 100 EQUIP
						(a)	(b)	(c)	(a)	(b)	(c)		
		REF NUMBER & MFR CODE				1-20	21-50	51-100	1-20	21-50	51-100		
PAFZZ	5310-582-5965	LOCKWASHER; MTG PLATE MS35338-44 (96906)		EA	6	*	*	*	*	*	*	*	*
XBFZZ		PLATE, MOUNTING; PUMP AND GEARBOX BASE 13219E3376 (97403)		EA	1								
PAFZZ	5340-952-0064	SHOCK MOUNT, VIBRATION; MTG PLATE J4624-41 (76005)		EA	6	*	*	*	*	*	*	*	*
PAOZZ	5305-964-0119	SCREW, TAPPING; THREAD CUTTING; INSTRUCTION PLATE MTG MS24629-10 (96906)		EA	4	*	*	*	*	*	*	*	*
PAOZZ		PLATE, INSTRUCTION; PUMP DISCHARGE VALVE 13219E3381 (97403)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		SCREW, DRIVE; PLATE MTG AN535-6-4 (88044)		EA	4	*	*	*	*	*	*	*	*
XBOZZ		PLATE, TRANSPORTATION; HEATING KETTLE 1901222063 (15277)		EA	1								
		GROUP OF - VALVES, FITTINGS, HOSE ASSEMBLIES, AND THERMOMETER											
PAOZZ	4730-278-4774	ELBOW, UNION; 90 DEG, 1 IN. NPT 1282 (14959)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		HOSE ASSEMBLY, FLEXIBLE 13219E3380 (96906)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-187-7599	COUPLING, STRAIGHT; 1 IN. NPT WWP521 (81348)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-288-7180	NIPPLE, PIPE; 1 IN. NPT, 8 IN. LG, STEEL WWP351 (81348)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		NIPPLE, PIPE; 1 IN. NPT, 5 1/2 IN. LG, STEEL MS51953-131 (96906)		EA	1	*	*	*	*	*	*	*	*
XBOZZ		PLATE, FLOW INDICATOR; VALVE 1901222087 (15277)		EA	1								
XBOZZ		HANDLE, VALVE 605 (29215)		EA	1								
XBOZZ		RING, STOP; VALVE 1546C (29215)		EA	1								
PAOZZ		VALVE, 3-WAY; 1 IN. NPTF, 3 PORT FIG605-1 (29215)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-196-2059	NIPPLE, CLOSE; 1 IN. NPT, STEEL MS51953-121 (96906)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-221-5011	ELBOW, STREET; 90 DEG, 1 IN. NPT, STEEL MS51952-6 (96906)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-196-1556	NIPPLE, PIPE; 1 IN. NPT, 5 IN. LG, STEEL WWP351 (81348)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-189-2599	UNION, CLOSED; 1 IN. NPT, STEEL FIG463 (26403)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		HOSE ASSEMBLY, FLEXIBLE FIG341-4 (41592)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		VALVE, DRAIN; 1 1/2 IN. NPT 4 (70142)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	4730-277-8891	NIPPLE, PIPE; 1 1/2 IN. NPT, 3 IN. LG, STEEL MS51953-132 (96906)		EA	1	*	*	*	*	*	*	*	*

[illegible]

[illegible]

[illegible]

DESCRIPTION

SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY US MAINT ALLOWANCE			30-DAY US MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CENTGY	DEPOT MAINT ALW PER 100 EQUIP
						(a)	(b)	(c)	(a)	(b)	(c)		
						1-20	21-50	51-100	1-20	21-50	51-100		
PAOZZ	4320-451-2729	PUMP, AIR, HANO: FUEL TANK, 2 IN. SIZE 49 (70142)		EA	1	*	*	*	*	*	*	*	*
XBOZZ		PLATE, CAUTION: FUEL TANK 1901222088 (15277)		EA	1								
PAOZZ	5310-880-7744	NUT, HEXAGON: FUEL TANK MTG SCREW, 5/16-18 NC MS51967-5 (96906)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	5310-407-9566	LOCKWASHER: FUEL TANK MTG SCREW, 5/16 IN. MS35338-45 (96906)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	5310-225-8499	SCREW, CAP, HEXAGON HEAD: FUEL TANK MTG, 5/16-18 X 1 IN. LG MS90725-34 (96906)		EA	1	*	*	*	*	*	*	*	*
XBOZZ		TANK, FUEL, PRESSURIZED 1901F22000 (15277)		EA	1								
PAOZZ	4730-221-2137	PLUG, PIPE: FUEL TANK DRAIN, 1/4 IN. NPT MS20913-25 (96906)		EA	2	*	*	*	*	*	*	*	*
		GROUP 07 - TEMPERATURE CONTROL ASSEMBLY											
PAOOF	6685-405-1695	CONTROL ASSEMBLY, TEMPERATURE GWSSJ369AS8 (45809)		EA	1	*	*	*	*	*	*	*	*
PAOZZ		KNOB: TEMPERATURE CONTROL 2C26 (45809)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	5305-984-6213	SCREW, CAP: COVER MTG MS35206-266 (96906)		EA	1	*	*	*	*	*	*	*	*
XBOZZ		COVER: TEMPERATURE CONTROL GWS10F (45809)		EA	1								
PAOZZ		GASKET, COVER: TEMPERATURE CONTROL GWS4 (45809)		EA	1	*	*	*	*	*	*	*	*
XBOZZ		SCREW, CAP, HEXAGON HEAD SLOTTED: FLANGE MTG L98 (45809)		EA	2								
XBOZZ		O RING: FLANGE ACC165 (45809)		EA	1								
XBOZZ		FLANGE, ELEMENT L4F (45809)		EA	1								
PAOZZ	6685-257-0188	ELEMENT, THERMOCOUPLE 445KLP110-5 (45809)		EA	1	*	*	*	*	*	*	*	*
XAOZZ		STUFFING BOX 3-4-211105 (45809)		EA	1								
PAOZZ	5305-638-4027	SCREW, MACHINE: ROUNDHEAD, VALVE MTG 5800-30-31 (31741)		EA	1	*	*	*	*	*	*	*	*
PAOZZ	5310-045-3296	LOCKWASHER: VALVE MTG MS35338-43 (96906)		EA	1	*	*	*	*	*	*	*	*
XAOZZ		VALVE ASSEMBLY: TEMPERATURE CONTROL GWSSJ369S2 (45809)		EA	1								
XAOZZ		MECHANISM ASSEMBLY: TEMPERATURE CONTROL GWSSJ369S6 (45809)		EA	1								
PAOZZ	5305-059-4568	SCREW, MACHINE: FLATHEAD, RELIEF VALVE MTG MS35190-253 (96906)		EA	2	*	*	*	*	*	*	*	*

[illegible]

SWR CODE	FEDERAL STOCK NUMBER	DESCRIPTION	USABLE ON CODE	UNIT OF MEAS	QTY INC IN UNIT	30-DAY US MAINT ALLOWANCE			30-DAY US MAINT ALLOWANCE			1-YR ALW PER 100 EQUIP CHNGY	DEPOT MAINT ALW PER 100 EQUIP
						(a)	(b)	(c)	(a)	(b)	(c)		
						1-20	21-50	51-100	1-20	21-50	51-100		
REF NUMBER & MFR CODE													
PA02Z	5305-225-3839	SCREW, CAP, HEXAGON HEAD: RECEPTACLE AND COVER MTG MS50725-8 (96906)		EA	4	*	*	*	*	*	*	*	*
XB02Z		RECEPTACLE: ELECTRICAL MS75021-1 (96906)		EA	1								
XB02Z		COVER, RECEPTACLE: ELECTRICAL 7731428 (77820)		EA	1								
PA02Z	5305-253-5622	SCREW, DRIVE: REFLECTOR MTG MS21318-41 (96906)		EA	4	*	*	*	*	*	*	*	*
XB02Z		REFLECTOR, RED MS35387-1 (96906)		EA	4								
XB02Z		REFLECTOR, AMBER MS35387-2 (96906)		EA	4								
PA02Z	5310-761-6882	NUT, HEXAGON: CLAMP MTG SCREW MS51967-2 (96906)		EA	2	*	*	*	*	*	*	*	*
XB02Z		CLAMP, CONDUIT 920 (82059)		EA	2								
PA02Z	5305-988-1725	SCREW, MACHINE: CLAMP MTG MS35206-281 (96906)		EA	2	*	*	*	*	*	*	*	*
XB02Z		CONDUIT, STEEL: THIN WALL, 1/2 IN. DIA, 78 IN. LG 1-2ENT (89481)		IN	78								
XB07Z		TUBING, PLASTIC: 1/2 IN. DIA, 72 IN. LG Z1T831 (81348)		IN	72								
PA02Z	5310-934-9751	NUT, HEXAGON: LIGHT MTG SCREW MS35650-302 (96906)		EA	78	*	*	*	*	*	*	*	*
PA02Z	5310-045-3296	LOCKWASHER: LIGHT MTG SCREW MS35338-43 (96906)		EA	78	*	*	*	*	*	*	*	*
PA02Z	5305-616-4831	SCREW, MACHINE: LIGHT MTG MS35266-65 (96906)		EA	78	*	*	*	*	*	*	*	*
PA02Z	6220-727-3288	LIGHT, MARKER: RED, 24 VOLTS MS35424-2 (96906)		EA	4	*	*	*	*	*	*	*	*
PA02Z	6220-726-1916	LIGHT, MARKER: RED, 24 VOLTS MS35423-2 (96906)		EA	7	*	*	*	*	*	*	*	*
PA02Z	6240-019-0877	LAMP: BLACKOUT, STOP AND TURN SIGNAL MS15570-1251 (96906)		EA	2	*	*	*	*	*	*	*	*
PA02Z	6240-295-1184	LAMP: STOP AND TAILLIGHT 1034 (08806)		EA	1	*	*	*	*	*	*	*	*
PA02Z	6220-577-3434	LIGHT, MARKER: AMBER, 24 VOLTS MS35423-1 (96906)		EA	4	*	*	*	*	*	*	*	*
PA02Z	6220-577-3435	LIGHT, MARKER: AMBER, 24 VOLTS MS35424-1 (96906)		EA	4	*	*	*	*	*	*	*	*
PA02Z	6220-466-0310	LIGHT, STOP-TURN 0433 (81834)		EA	2	*	*	*	*	*	*	*	*
PA02Z	6220-337-6471	LIGHT, STOP-TURN MS51330-1 (96906)		EA	2	*	*	*	*	*	*	*	*
XB02Z		CONNECTOR ASSEMBLY MS27144-1 (96906)		EA	18								
XB02Z		CONNECTOR ASSEMBLY MS27142-2 (96906)		EA	6								
PA02Z	5935-925-6494	TERMINAL MS27148-1 (96906)		EA	2	*	*	*	*	*	*	*	*
XB02Z		BOARD, TERMINAL		EA	2								

PA00F		HARNESS, WIRING 1901MA2000 (15277)	EA	1	*	*	*	*	*	*	*	*
XB02Z		WIRE ASSEMBLY 1901MA2000-1 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY 1901MA2000-2 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY, GROUND 1901MA2000 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY 1901MA2000-1 (15277)	EA	3								
XB02Z		WIRE ASSEMBLY 1901MA2000-2 (15277)	EA	1								
XB02Z		WIRE ASSEMBLY 1901MA2000-3 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY 1901MA2000-4 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY 1901MA2000-5 (15277)	EA	2								
XB02Z		WIRE ASSEMBLY 1901MA2000-6 (15277)	EA	1								
XB02Z		ADAPTER, CONNECTOR MS27147-1 (55906)	EA	15								
XB02Z		BREAKER, CIRCUIT 30056-3051K (13445)	EA	3								
		GROUP 10 - SPRING, HANGER ASSEMBLIES, SPRING AND AXLE CLAMP AND U-BOLT										
PAFZZ	5310-732-0560	NUT, HEXAGON: REAR BRACKET MTG SCREW MS51967-14 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ	5310-584-5272	LOCKWASHER: REAR BRACKET MTG SCREW MS35338-48 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ	5305-782-9495	SCREW, CAP, HEXAGON HEAD: REAR BRACKET MTG MS90725-111 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ	5310-732-0560	NUT, HEXAGON: FRONT BRACKET MTG SCREW MS51967-14 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ	5310-584-5272	LOCKWASHER: FRONT BRACKET MTG SCREW MS35338-48 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ	5305-782-9495	SCREW, CAP, HEXAGON HEAD: FRONT BRACKET MTG MS90725-111 (96906)	EA	4	*	*	*	*	*	*	*	*
PAFZZ		NUT: CLAMP MTG 4601-7 (22938)	EA	8	*	*	*	*	*	*	*	*
PAFZZ		U-BOLT: CLAMP MTG 5100-11 (22938)	EA	4	*	*	*	*	*	*	*	*
XB02Z		CLAMP, SPRING AND AXLE 5601-1 (22938)	EA	2								
XB02Z		HANGER ASSEMBLY: SPRING, FRONT 1-4250 (22938)	EA	2								

REF NUMBER & MFR CODE	CODE	OF MEAS	IN UNIT	1-20	21-50	51-100	1-20	21-50	51-100	EQUIP CNTGY	100 EQUIP	PIC. NO	ITEM NO
330-172-0034	FITTING, LUBRICATION MS15003-6 (96906)	EA	2	*	*	*	*	*	*	*	*	12	11
315-839-5822	PIN, COTTER: SHACKLE BOLT MTG MS24665-353 (96906)	EA	2	*	*	*	*	*	*	*	*	12	12
310-850-6884	NUT, SHACKLE BOLT MS35692-45 (22938)	EA	2	*	*	*	*	*	*	*	*	12	13
306-136-9800	BOLT, SHACKLE: 9/16-18 UF X 3 7/8 IN. LG 5402-2 (22938)	EA	2	*	*	*	*	*	*	*	*	12	14
	BRACKET: SPRING, FRONT 4250 (22938)	EA	2									12	15
	HANGER ASSEMBLY: SPRING, REAR 1-4251 (22938)	EA	2									12	16
115-839-5822	PIN, COTTER: RIVET MTG, 1/8 X 1 IN. MS24665-353 (96906)	EA	2	*	*	*	*	*	*	*	*	12	17
	RIVET: ROUNDHEAD, 9/16 IN. DIA X 3 IN. LG 5403-1 (22938)	EA	2									12	18
	BRACKET: SPRING, REAR 4251 (22938)	EA	2									12	19
	SPRING 1-4014 (22938)	EA	2	*	*	*	*	*	*	*	*	12	20
	GROUP 11 - WHEEL, AXLE AND HUB ASSEMBLIES												
10-678-1363	TIRE: 700 X 16 MS35388-73 (96906)	EA	2	*	*	*	*	*	*	*	*	13	1
10-269-7332	TUBE, TIRE: 700 X 16 MS35292-8 (96906)	EA	2	*	*	*	*	*	*	*	*	13	2
10-732-0560	NUT, STUD: WHEEL MTG, 1/2-20 THD SIZE MS51968-14 (96906)	EA	10	*	*	*	*	*	*	*	*	13	3
10-584-5272	LOCKWASHER: WHEEL MTG, 1/2 IN. MEDIUM PLAIN MS35338-48 (96906)	EA	10	*	*	*	*	*	*	*	*	13	4
	WHEEL ASSEMBLY: 700 X 16 7387807 (00000)	EA	2									13	5
	CAP, GREASE 6312 (22938)	EA	2									13	6
	AXLE ASSEMBLY: WHEEL 1-2006 (22938)	EA	1	*	*	*	*	*	*	*	*	13	7
5-285-7161	PIN, COTTER: SPINDLE NUT, 1/8 X 2 IN. MS24665-377 (96906)	EA	2	*	*	*	*	*	*	*	*	13	8
	NUT, SPINDLE 4600-2 (22938)	EA	2	*	*	*	*	*	*	*	*	13	9
0-455-1180	COLLAR, GREASE 6316 (22938)	EA	2	*	*	*	*	*	*	*	*	13	10
	BEAM, AXLE 2006-21 (22938)	EA	1									13	11
	WASHER, SPINDLE 4702-5 (22938)	EA	2	*	*	*	*	*	*	*	*	13	12
	BEARING CONE, OUTER 6058 (22938)	EA	2	*	*	*	*	*	*	*	*	13	13

[illegible]

PA02Z	5305-564-0119	SCREW, TAPPING, THREAD CUTTING: INSTRUCTION PLATE MTG MS24625-10 (96906)	EA	4	*	*	*	*	*	*	*	*	*	14
PAD2Z		PLATE, INSTRUCTION: TANK OUTLET VALVE 13219E33856 (97403)	EA	1	*	*	*	*	*	*	*	*	*	14
XAF2Z		FRAME, SHELL ASSEMBLY 1901E22000 (15277)	EA	1										14

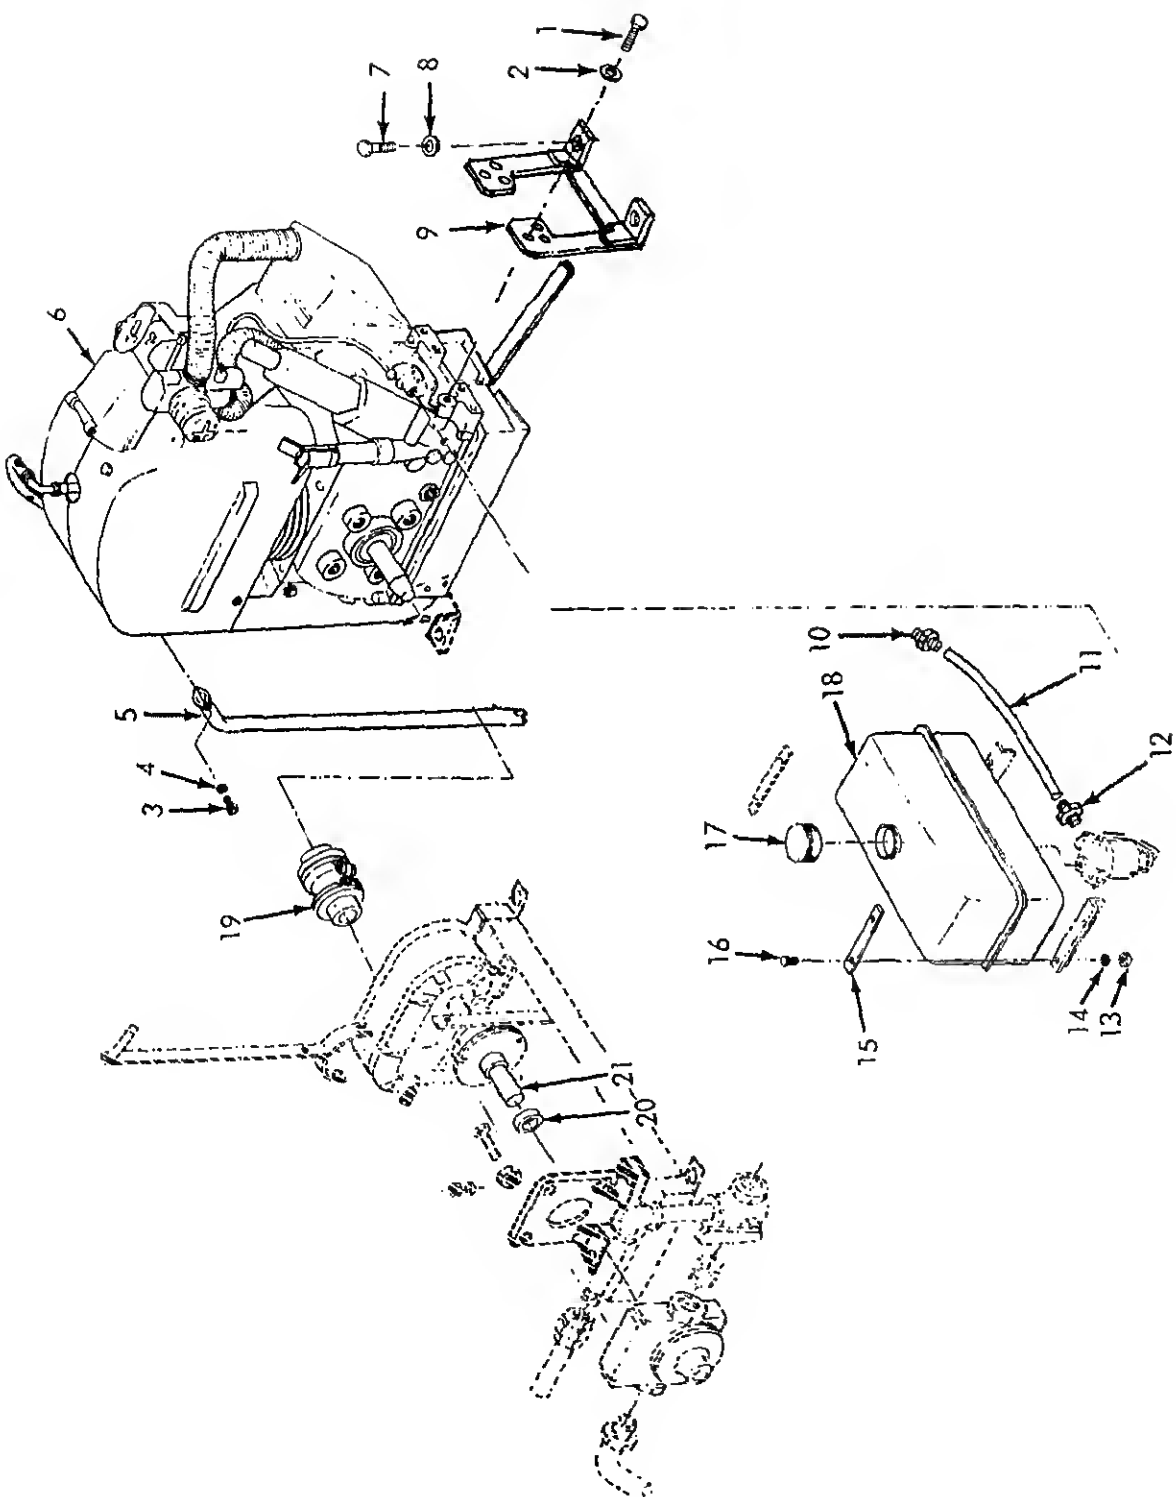
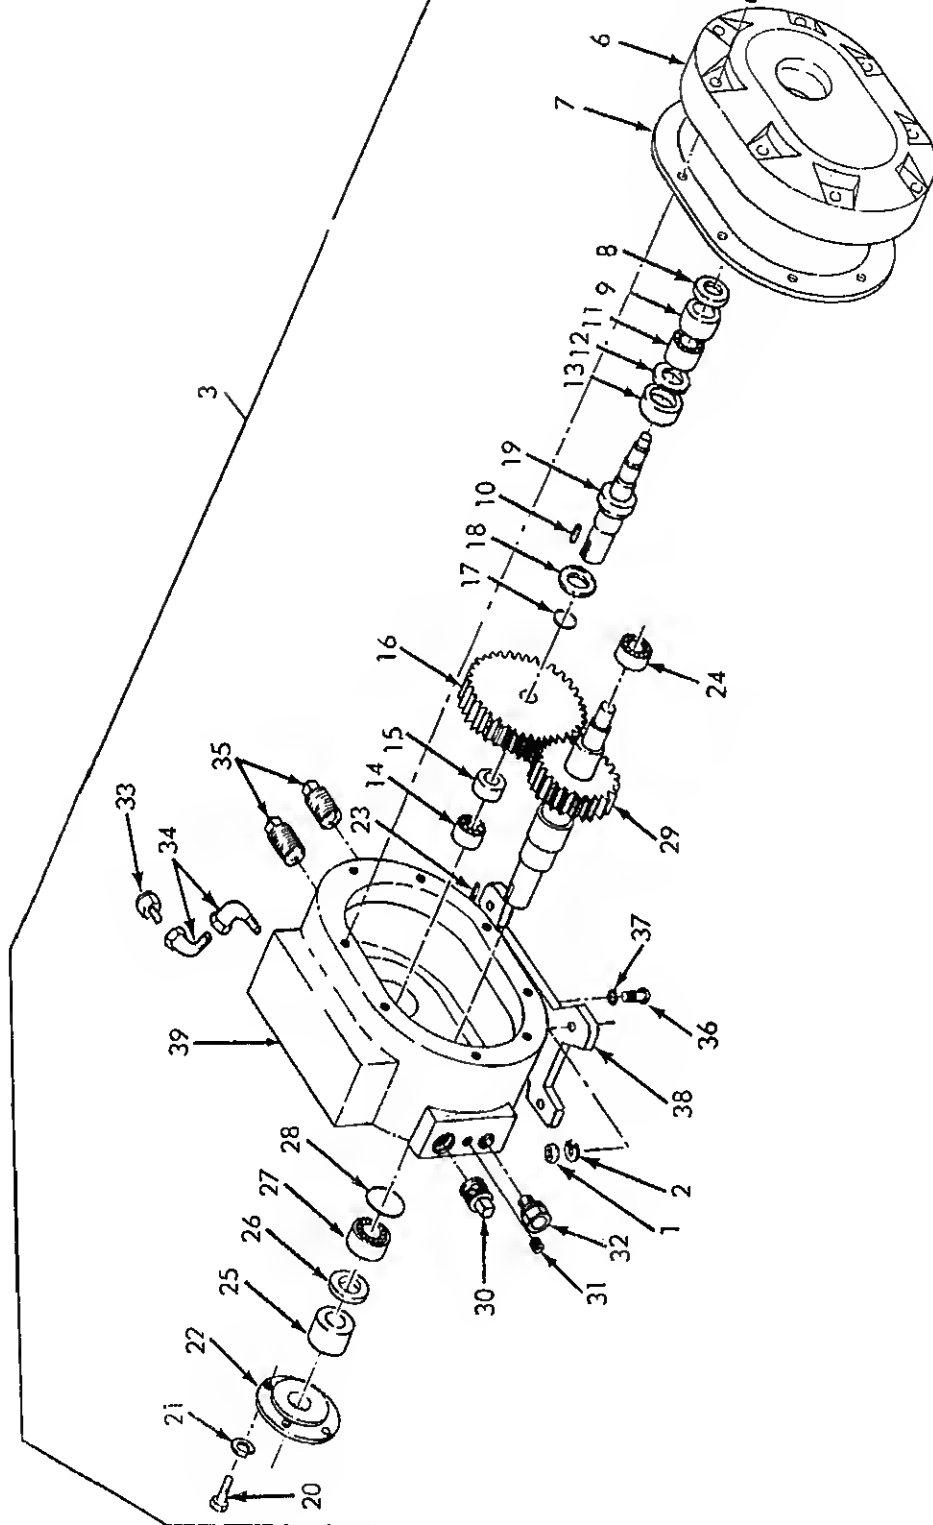


Figure 2. Gear Reducer



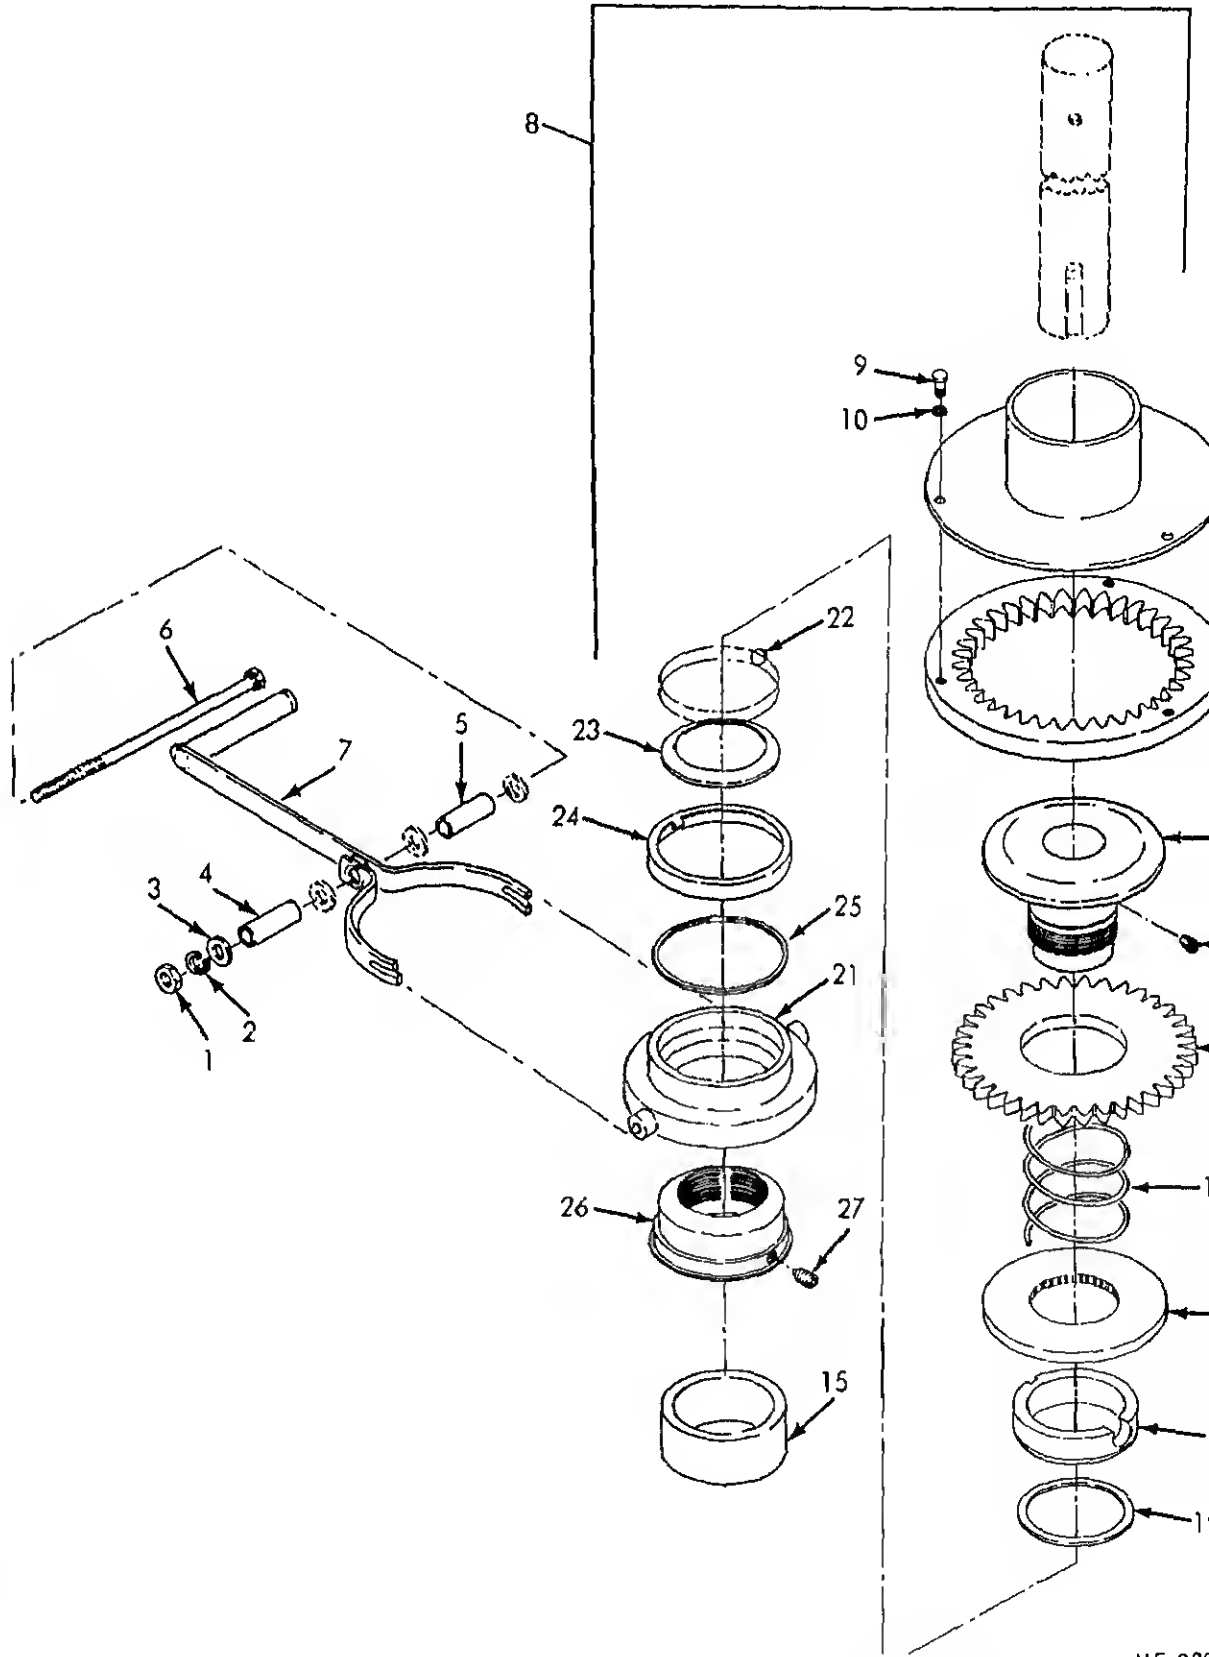
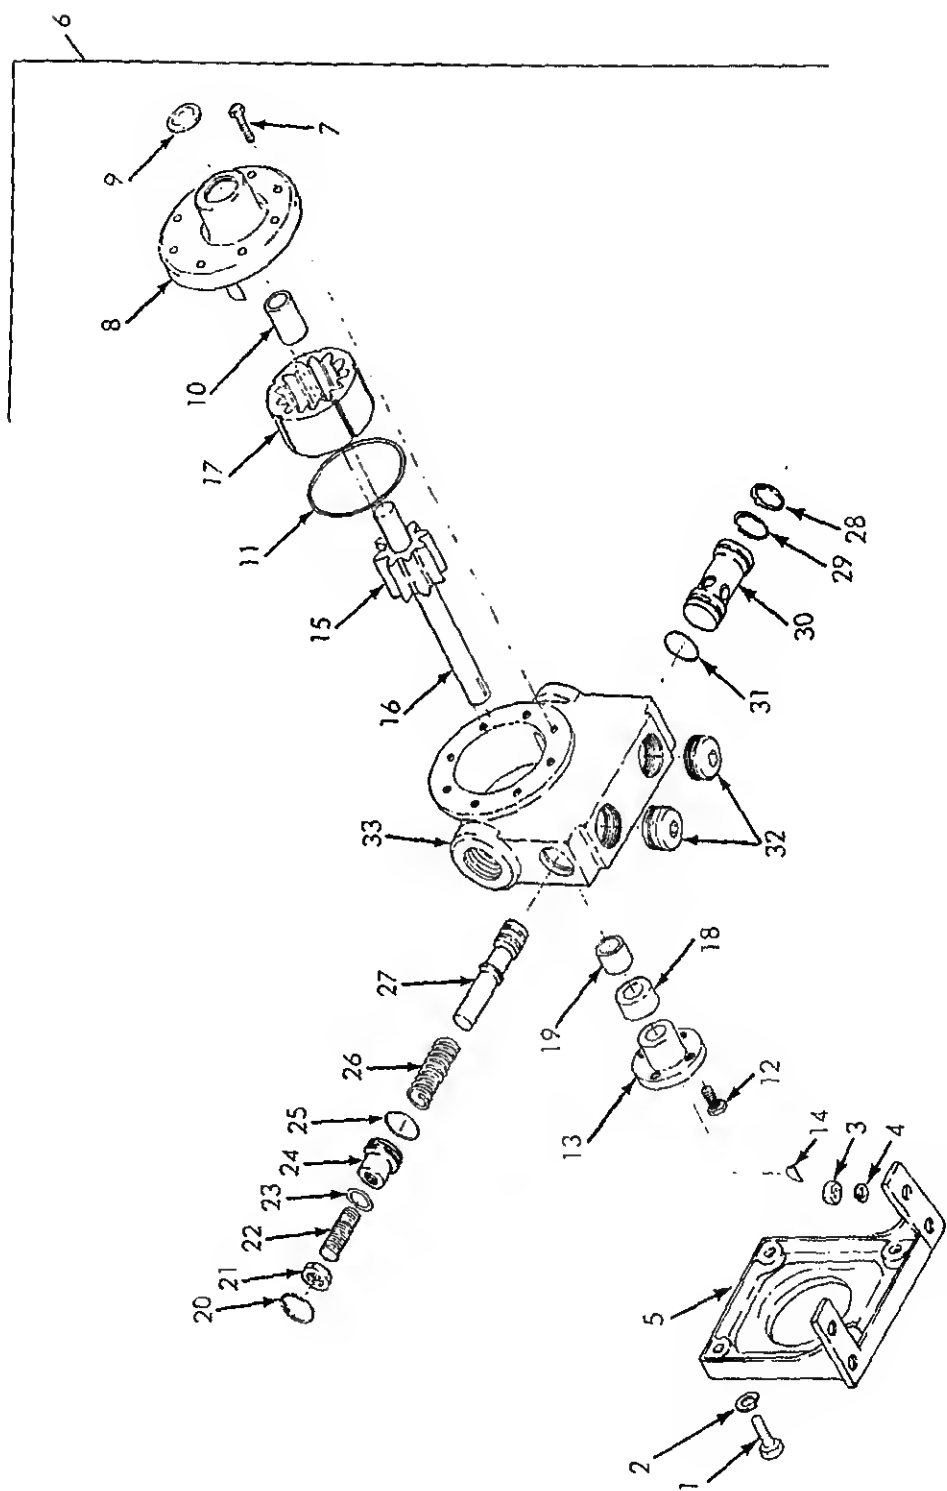


Figure 3 Clutch and Shifter Lever






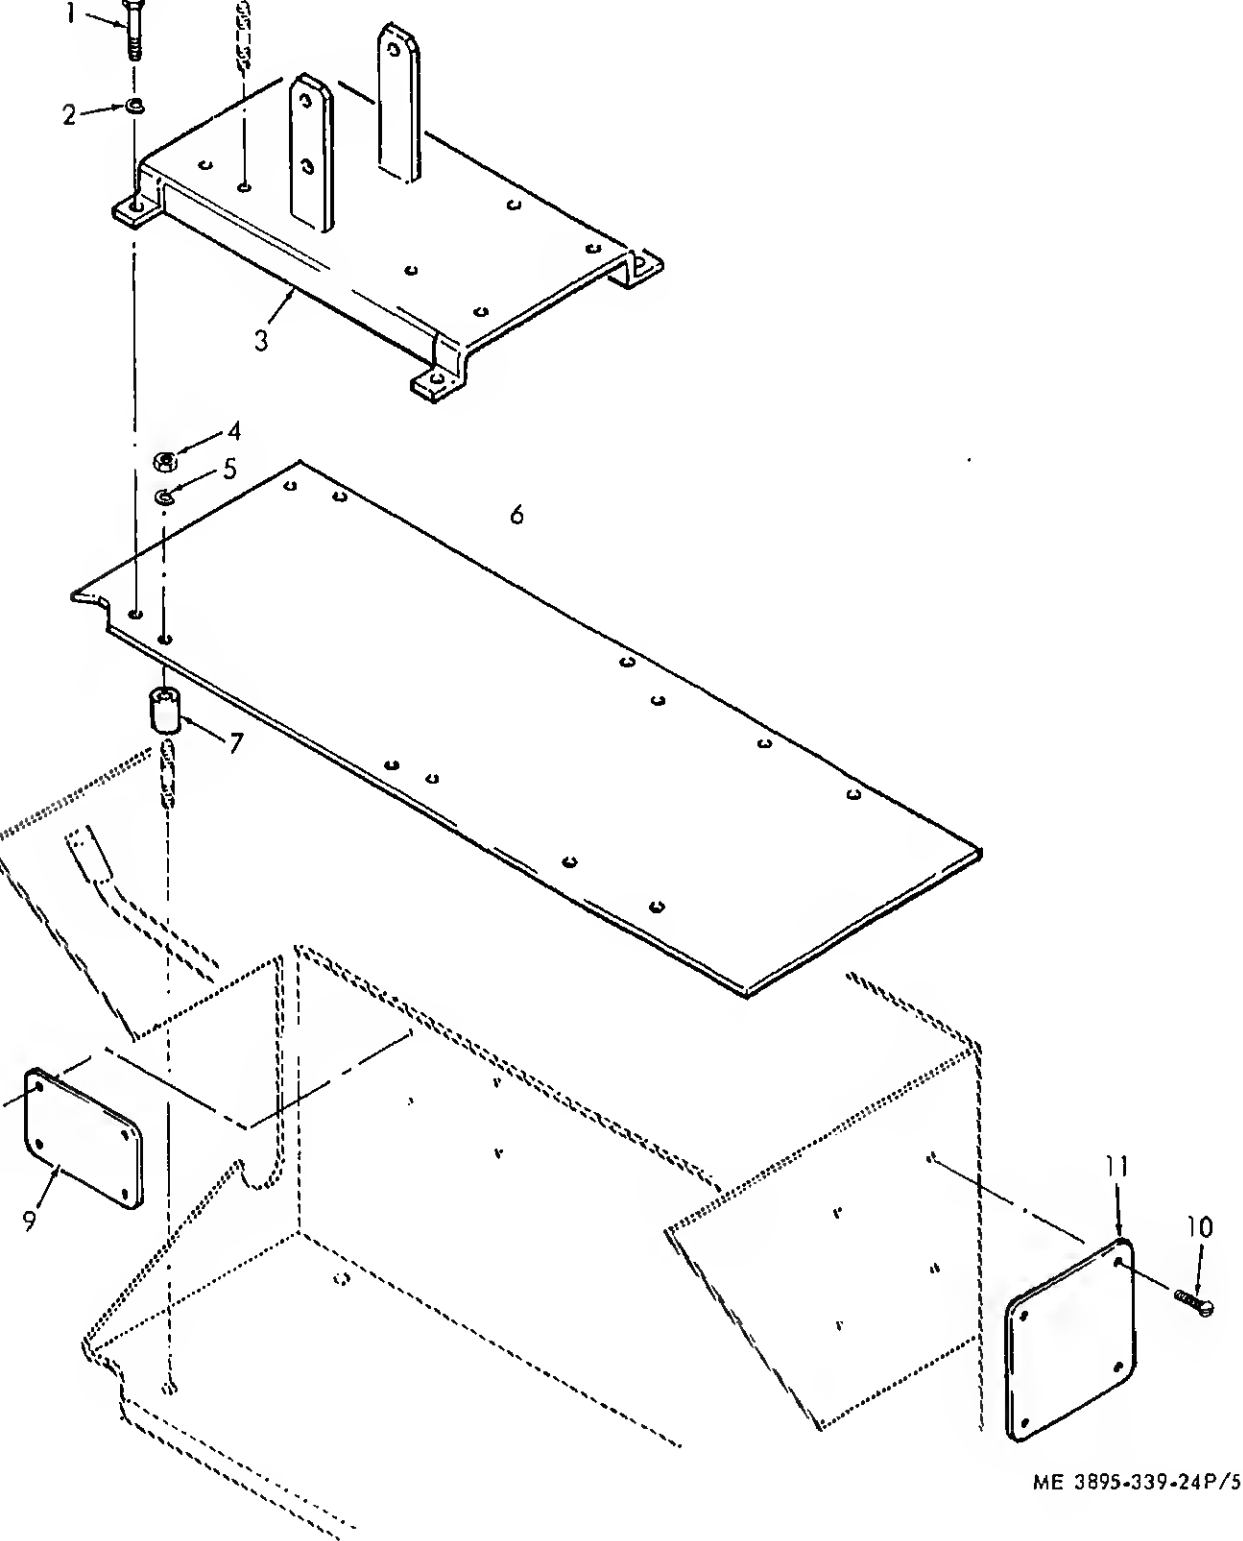


Figure 5. Pump and Gearbox Base and Mounting Plate

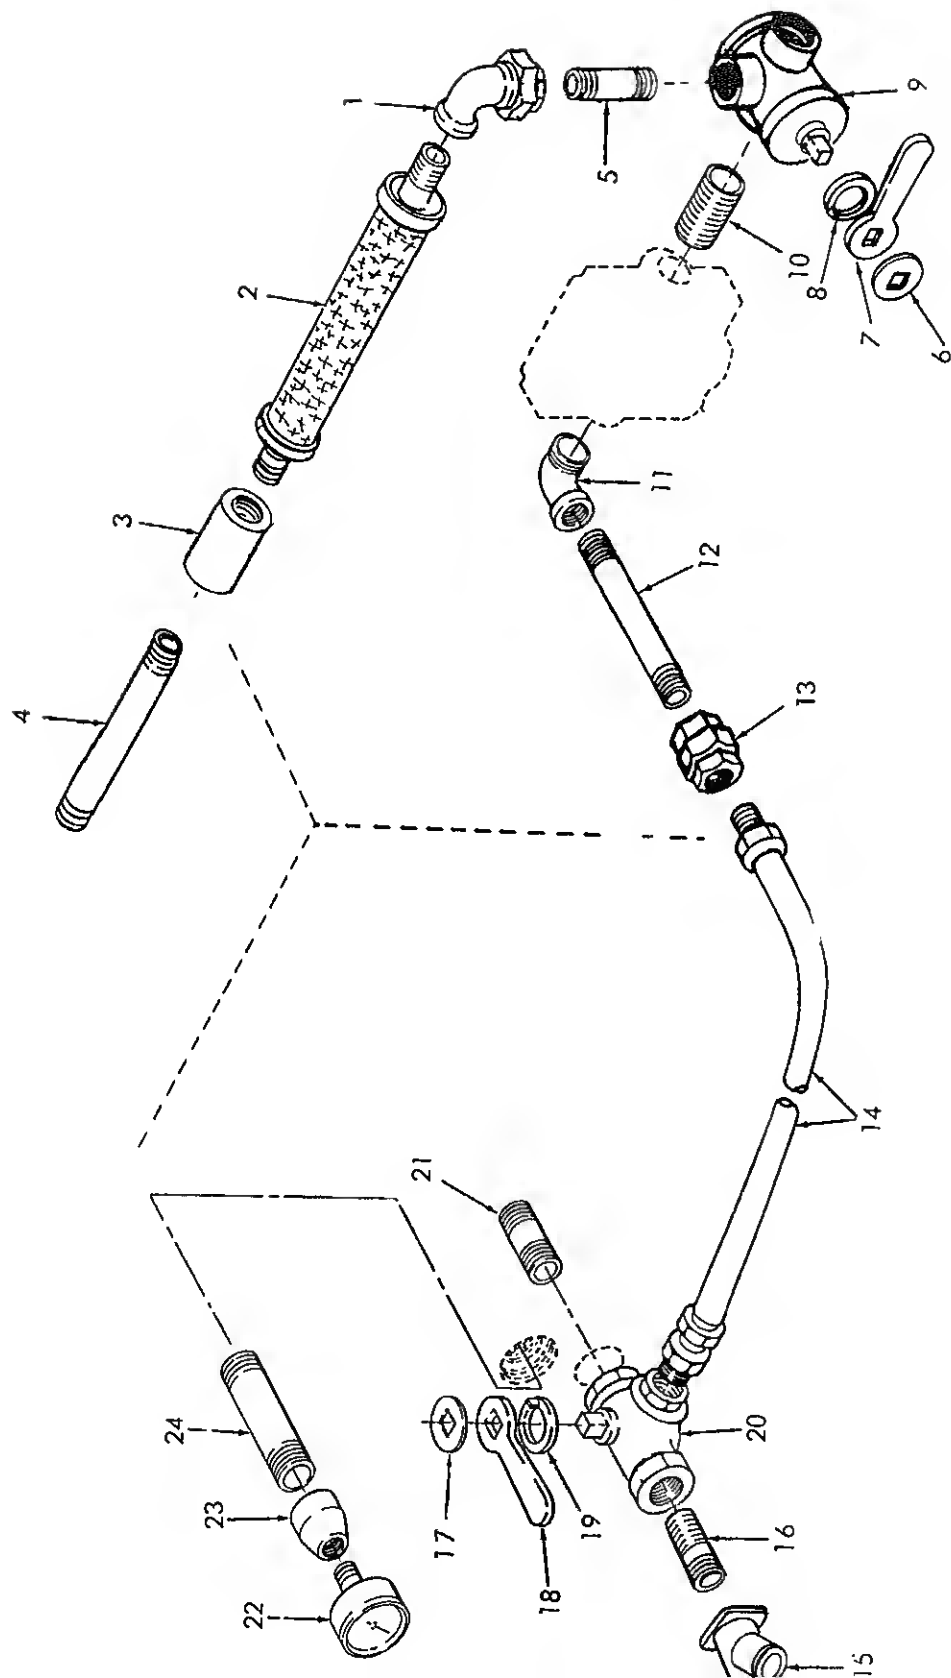


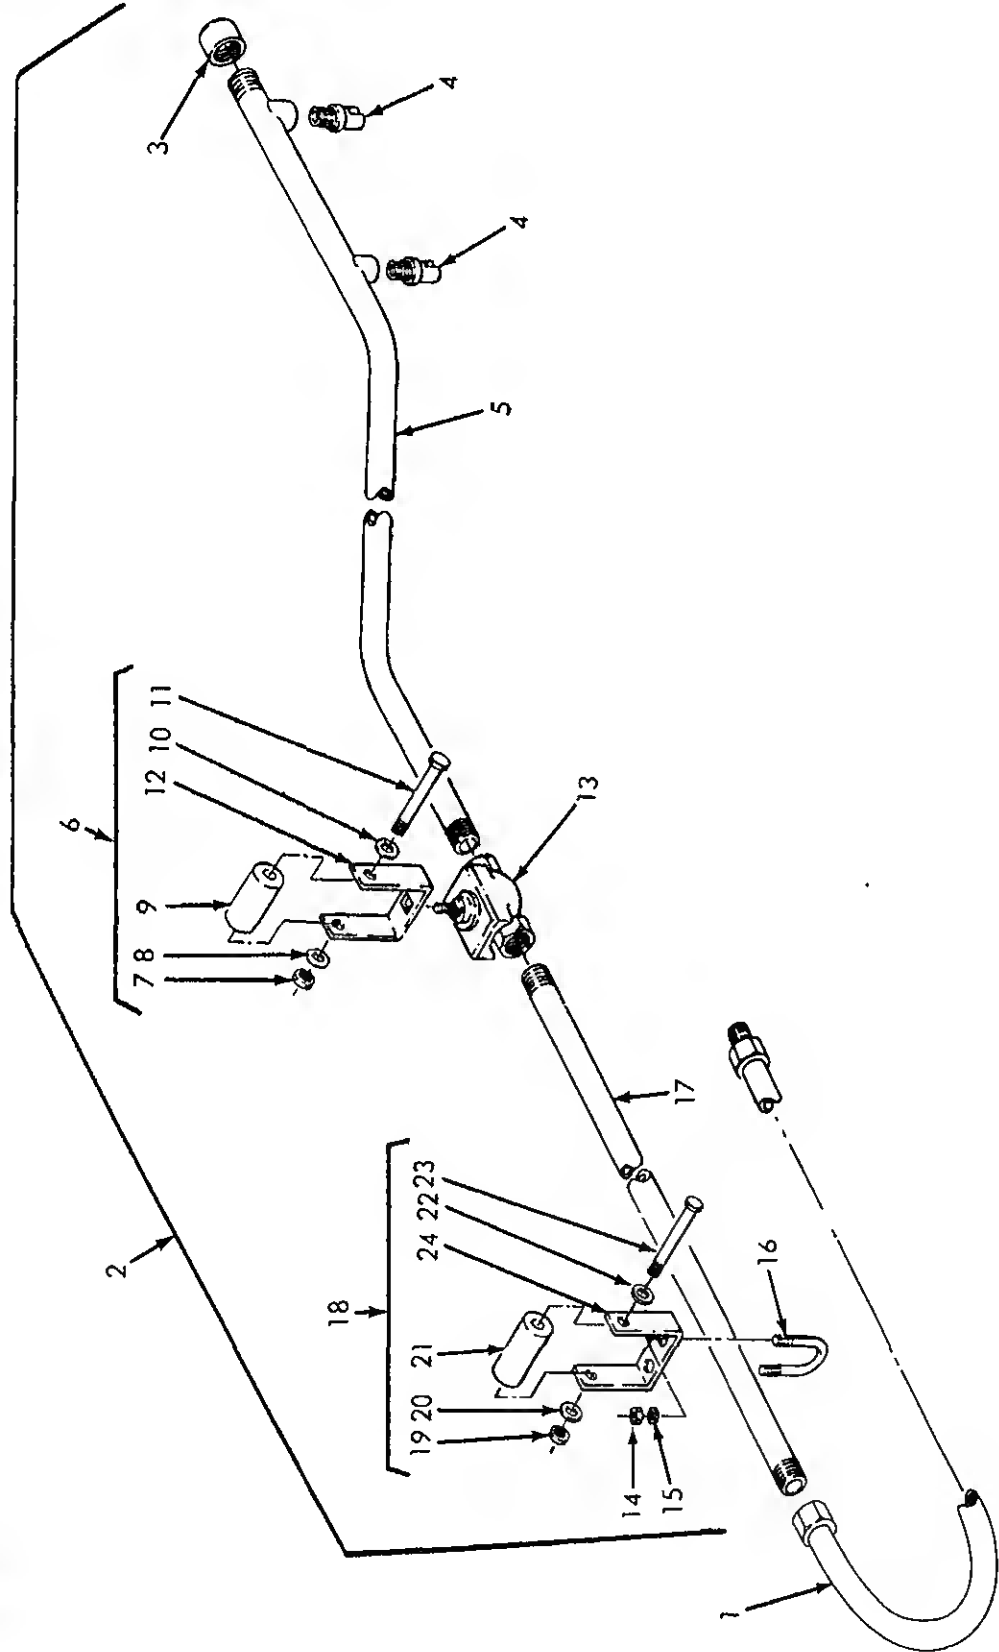

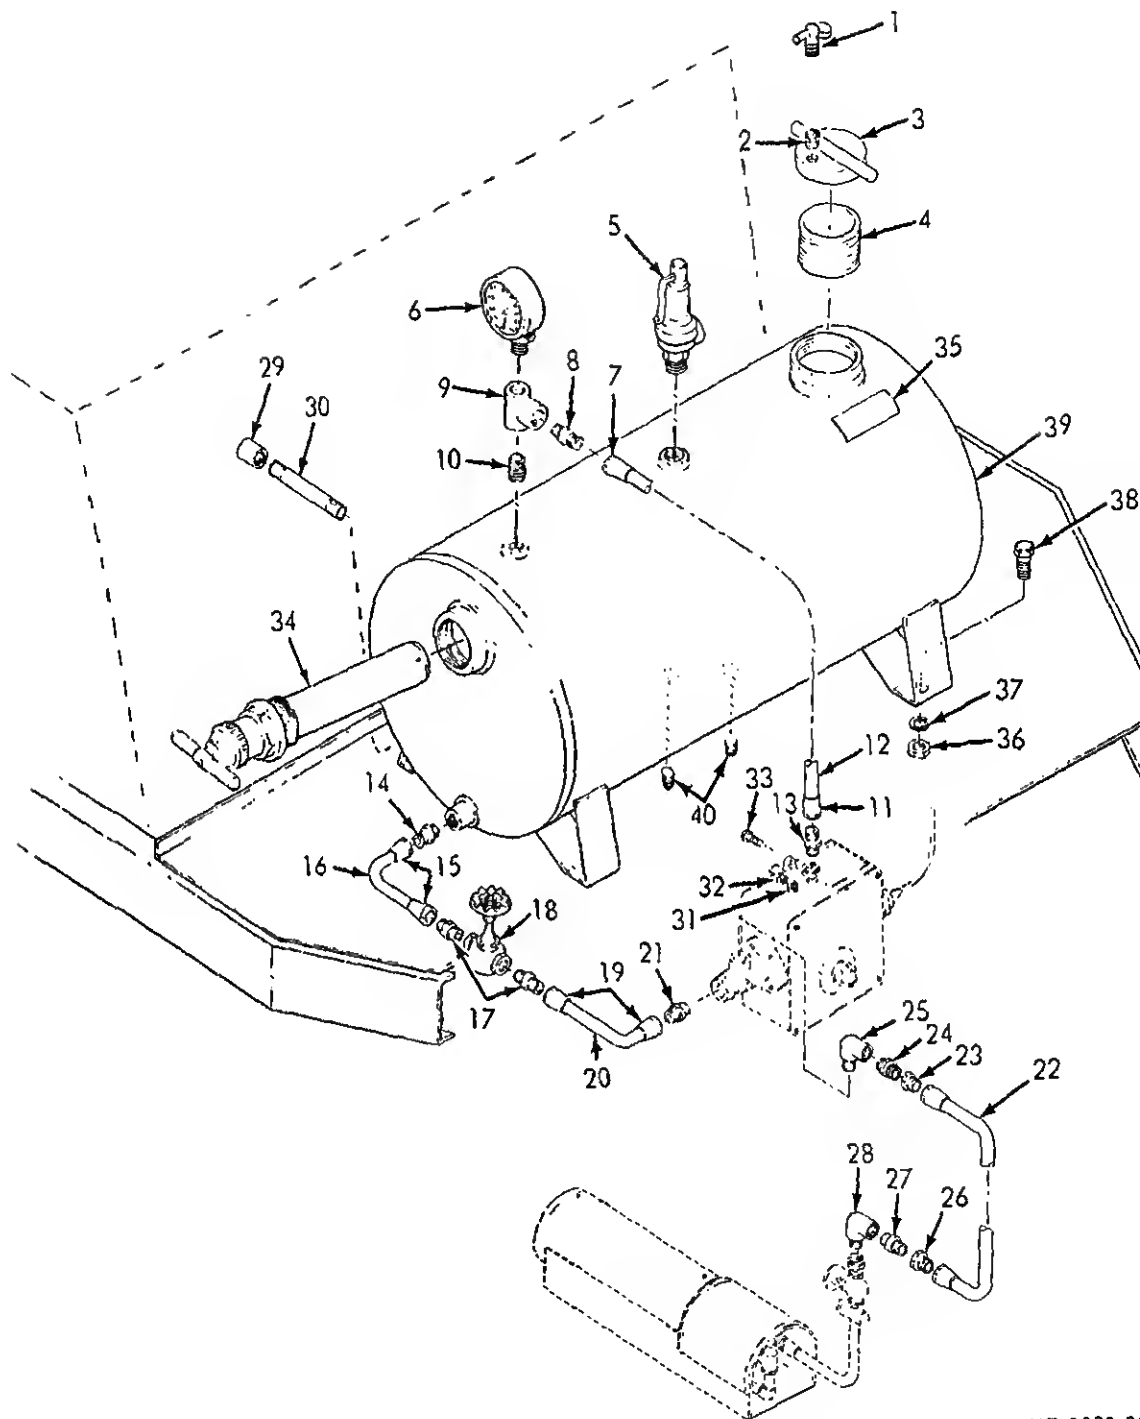


ME 3895-3

Figure 8. Fuel Tank, Pressure Gage, Air Pump, Valves, Lines and Fittings

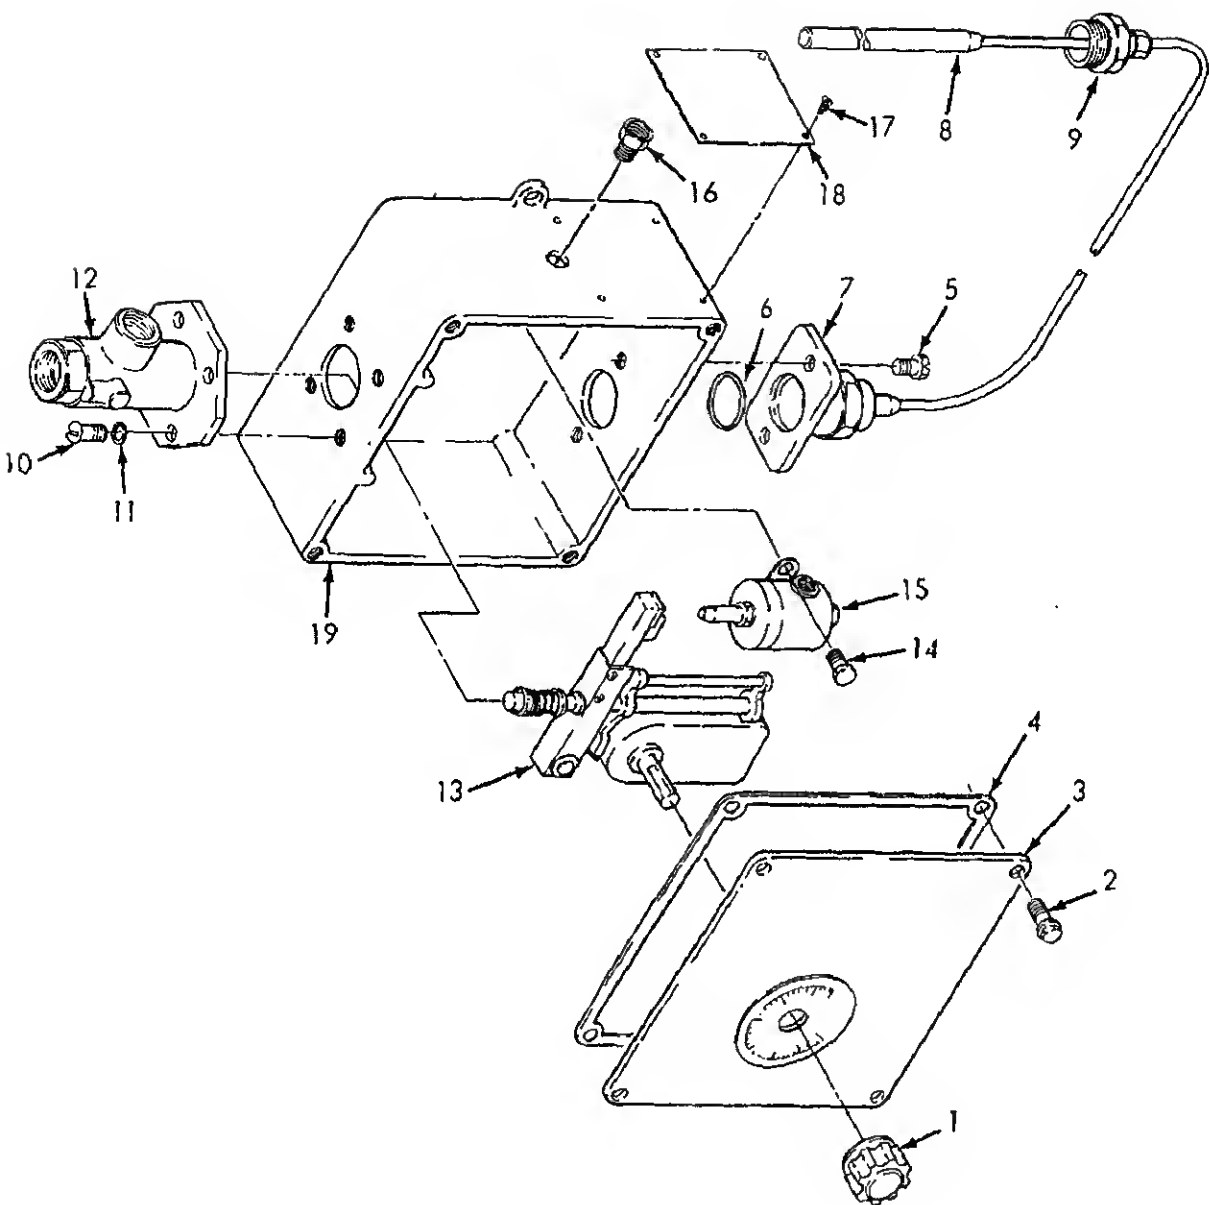


ME 3895-339-24P/9

Figure 9. Temperature Control

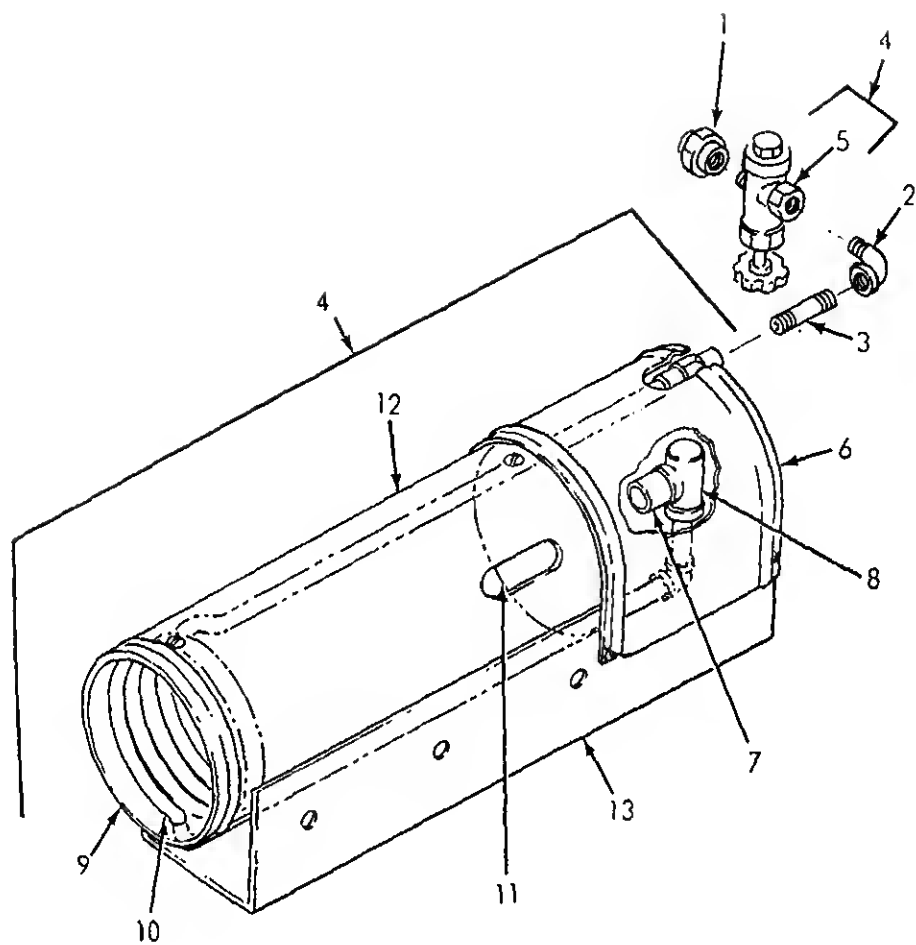



ME 3895-339

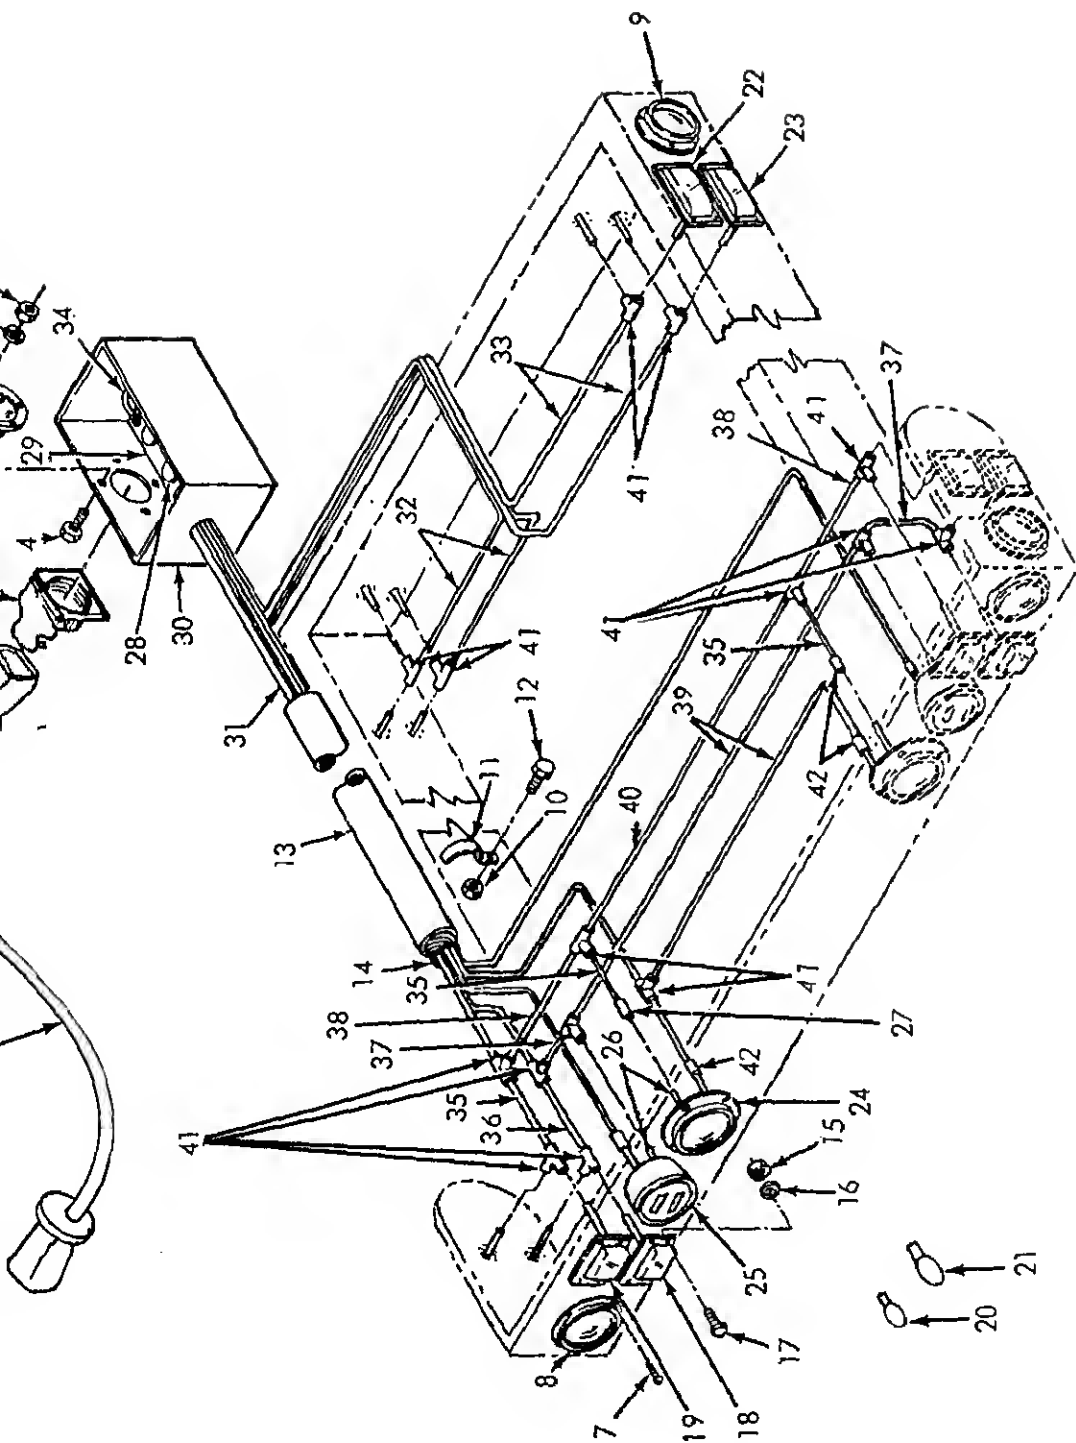

ME 3895-339-24P/11


Figure 11. Intervehicular cable, lights, reflectors, wiring harness and wiring.

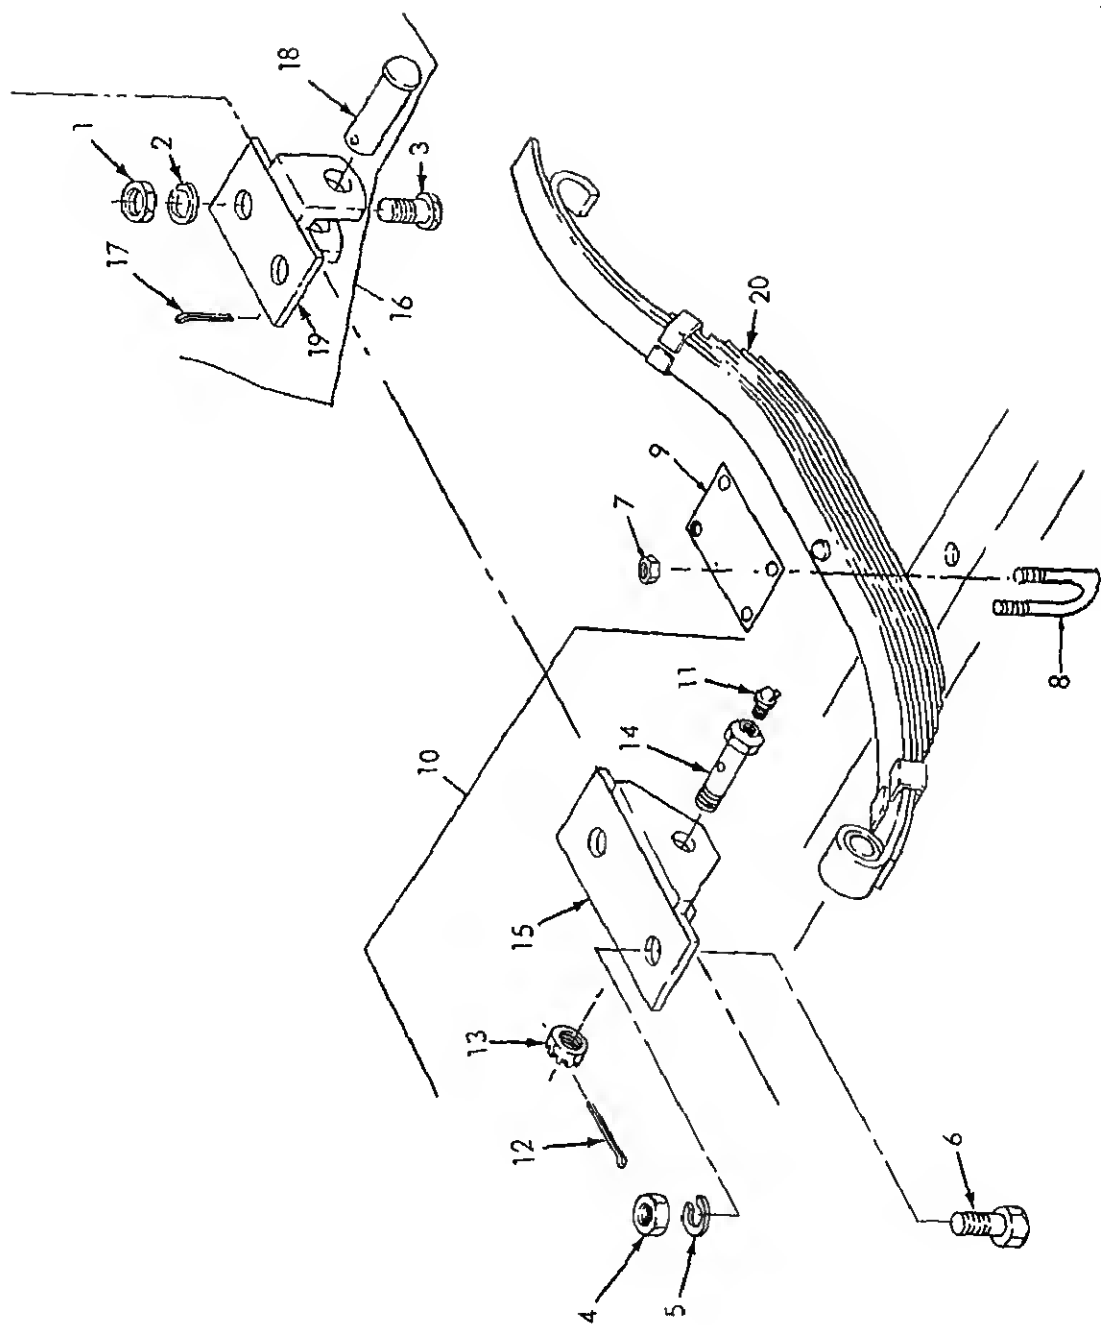

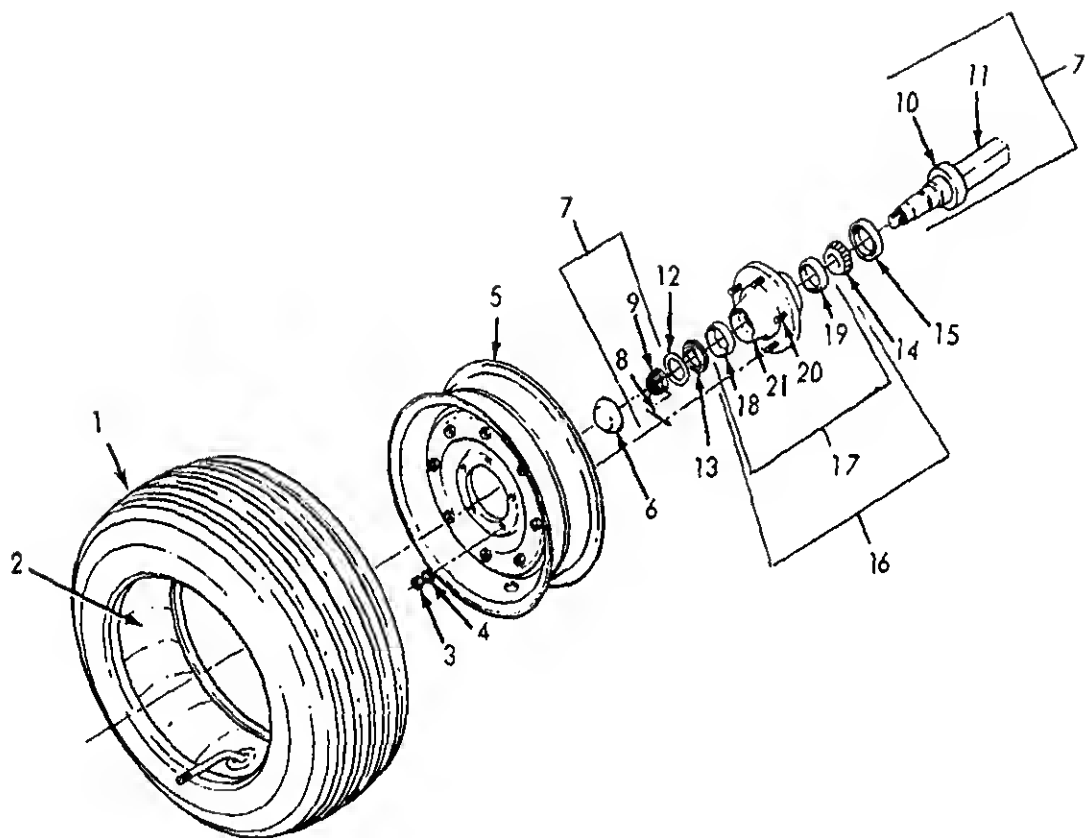

ME 3895-339-24P/13

Figure 13. Wheel, axle, and hub assemblies.

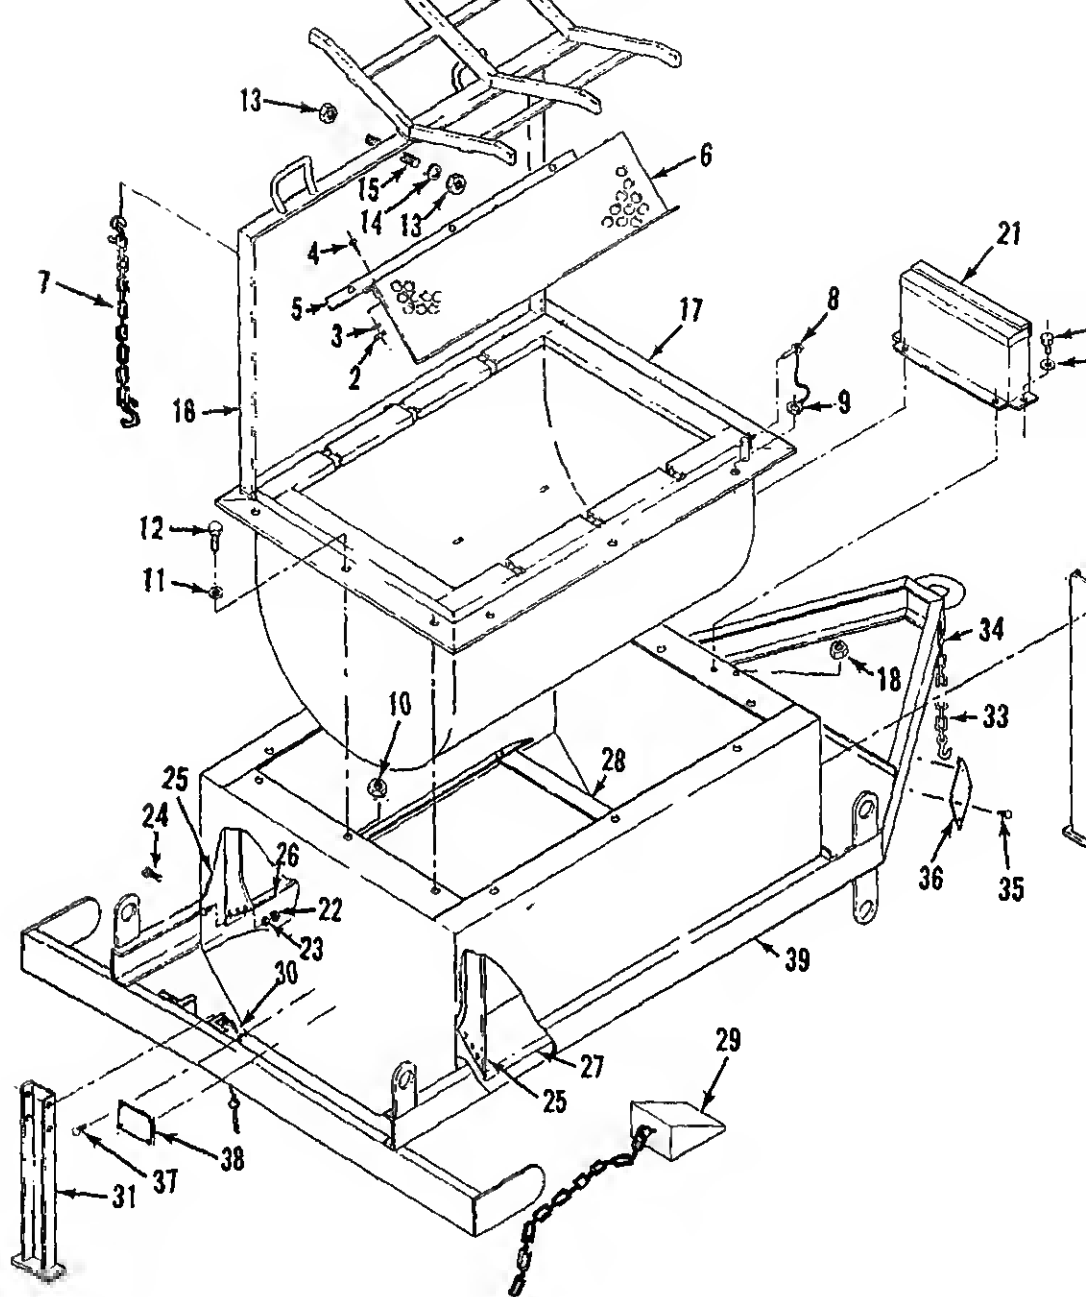

ME 3895-339-24P

Figure 14. Tank, Lid, Support Jacks and Frame

13	10	5310-637-9541	3	2
181	16		5	2
1914	1	5310-732-0560	12	1
332	2		12	4
363	1		13	3
510	6	5310-761-6882	1	13
660	17		5	4
660	19		7	14
715	3		11	2
644	14		11	10
108			14	2
529			14	10
729	8		14	13
866	34		14	18
910	11		14	22
027	21	5310-809-4058	7	8
034	11		7	10
599	3		7	20
599	13		7	22
472	4	5310-850-6884	12	13
556	12	5310-880-7744	2	1
059	10		4	3
137	40		8	36
011	11	5310-934-9751	11	15
412	3	5310-982-4938	8	31
54	23	5315-285-7161	13	8
591	16	5315-616-5522	4	14
549	34	5315-839-5822	12	12
83	30		12	17
80	4	5365-477-0327	2	31
592	29	5935-925-6494	11	28
54	5	6220-337-6471	11	25
668	14	6220-466-0310	11	24
02	1	6220-577-3434	11	22
339	16	6220-577-3435	11	23
	4	6220-726-1916	11	19
14	12	6220-727-3288	11	18
14	20	6240-019-0877	11	20
14	24	6240-295-1184	11	21
7	11	6685-236-9089	6	22
9	17	6685-405-1695	9	
14	35			
11	7			
11	7			
5	1			
31	17			
27	10			
95	1			
	3			
12	6			
12	8			
5	37			
14	2			
13	12			
25	33			
27	14			
00	11			
96	16			
	19			
51	7			
51	7			
99	8			
66	38			
	2			
	4			
	4			
60	37			
5	15			
	2			
	4			
	14			
	5			
	7			
	8			
	32			
11	3			
14	3			
14	11			
14	14			
14	19			
14	23			
2	2			
	2			
12	5			
12	4			
13	8			
1				

REFERENCE No.	MFG CODE	FIG No.	ITEM No.	REFERENCE No.	MFG CODE	FIG No.
ACC165	45809	9	6	MS35338-46	96906	1
AN535-2-4	88044	9	17		96906	3
AN535-6-4	88044	5	10		96906	5
AN6227-213	88044	4	25	MS35338-48	96906	4
	88044	4	24		96906	12
AN6227-235	88044	4	11		96906	12
BLN4-4-562	84256	14	30		96906	13
OC601-2	93061	8	1	MS35387-1	96906	11
0433	81834	11	24	MS35387-2	96906	11
E64	01942	4	21	MS35388-93	96906	13
E68	01942	4	23	MS35423-1	96906	11
FIG341-15	41592	7	1	MS35423-2	96906	11
FIG341-4	41592	6	14	MS35424-1	96906	11
FIG463	26403	6	13	MS35424-2	96906	11
FIG605-1	29215	6	9	MS35650-302	96906	11
FIG605-1-1-2	29215	6	20	MS35756-12	96906	4
FIG700-503-4	37239	7	13	MS39230-1	96906	2
FR3	24617	7	7	MS39232-9	96906	6
F11	01942	4	10	MS39233-5	96906	8
F11A	01942	4	19	MS35692-45	22938	12
F18AT	01942	4	18	MS51330-1	96906	11
F22	01942	4	13	MS51922-1	96906	7
F31	01942	4	9		96906	7
GWS5J369-11	45809	9	19	MS51952-6	96906	6
GWS5J369A58	45809	9		MS51953-111	96906	8
GWS5J36952	45809	9	12	MS51953-121	96906	6
GWS5J36956	45809	9	13	MS51953-172	96906	6
GWS5J36957	45809	9	15	MS51953-131	96906	6
GWS10F	45809	9	3	MS51953-134	96906	6
GWS4	45809	9	4	MS51953-181	96906	6
H3-8U50120	82247	7	4	MS51967-14	96906	12
H35E	24617	3	11		96906	12
J4624-41	76005	5	7		96906	13
LG4ST625	83014	14	8	MS51967-2	96906	1
LW1036-6	83014	14	9		96906	5
L4F	45809	9	7		96906	7
L98	45809	9	5		96906	11
MILHI3444TYPE1	81348	1	11		96906	11
MS15003-6	96906	12	11		96906	14
MS15570-1251	96906	11	20		96906	14
MS20913-25	96906	8	40		96906	14
MS21318-41	96906	11	7		96906	14
MS24629-10	96906	5	8		96906	14
	96906	14	37	MS51967-5	96906	2
MS24665-353	96906	12	12		96906	4
	96906	12	17		96906	8
MS24665-377	96906	13	8	MS51968-14	96906	13
MS27040-10	96906	8	31	MS51968-8	96906	3
MS27142-2	96906	11	27	MS75021-1	96906	11
MS27144-1	96906	11	26	MS90725-111	96906	4
MS27147-1	96906	11	41		96906	12
MS27148-1	96906	11	28		96906	12
MS27183-10	96906	7	8		96906	7
	96906	7	10	MS90725-26	96906	4
	96906	7	20	MS90725-33	96906	8
	96906	7	22	MS90725-34	96906	2
MS27183-15	96906	3	3	MS90725-5	96906	4
MS35190-253	96906	9	14		96906	1
MS35206-266	96906	11	2	MS90725-60	96906	7
MS35206-281	96906	8	12		96906	5
MS35206-283	96906	11	33	MS90725-8	96906	1
MS35266-65	96906	11	17		96906	11
MS35292-8	96906	13	2		96906	14
MS35338-43	96906	9	11		96906	14
	96906	11	16		96906	14
MS35338-44	96906	1	2		96906	14
	96906	1	4		96906	14
	96906	1	14	MS90726-6	96906	1
	96906	5	5	NO1-1-4	13743	14
	96906	7	15	SC3-4	71176	1
	96906	8	32	TK164B2	03742	14
	96906	11	3	WD34-11	27695	10
	96906	14	3		27695	10
	96906	14	8	WH02	27695	10
	96906	14	11	WH034	27695	10
	96906	14	14	WH034-10	27695	10
	96906	14	19	WH034-12	27695	10
MS35338-45	96906	14	23	WH034-13	27695	10
	96906	2	2	WH034-14	27695	10
	96906	4	4	WH034-8	27695	10
	96906	4	4	WH034-9	27695	10

REFERENCE No.	AFG CODE	ITEM No.	REFERENCE No.	AFG CODE	ITEM No.	
351	81348	6	1901ZZZ018	15277	14	25
	81348	8	1901ZZZ022	15277	14	5
521	81348	7	1901ZZZ048	15277	14	28
6	45809	9	1901ZZZ062	15277	14	36
831	81348	11	1901ZZZ063	15277	5	11
2-0425	80535	14	1901ZZZ076	15277	1	15
ENT	89481	11	1901ZZZ087	15277	6	6
006	22938	13		15277	6	17
1612	22938	13	1901ZZZ088	15277	8	35
1005	93061	10	1901ZZZ136	15277	3	6
1014	22938	12	201031	21444	1	19
250	22938	12	2006-21	22938	13	11
251	22938	12	202PS4-4	93061	8	28
08	97403	1	2083-4-45	00624	10	1
0R	01942	4	2084-457-8	00624	10	3
0R4	01942	4	209051258	93061	8	2
014	01942	4	209PS8-4	93061	8	23
015	01942	4		93061	8	26
026	01942	4	214598	38056	8	5
030	01942	4	21604	93061	8	24
050	01942	4		93061	8	27
051	01942	4	2203P4	93061	8	9
054	01942	4	235031	24617	3	15
055	01942	4	235302	24617	3	12
057	01942	4	235303	24617	3	17
058	01942	4	235306	24617	3	18
	01942	4	235307	24617	3	26
063	01942	4	235309	24617	3	23
034	08806	11	235311	24617	3	20
08	45809	9	235312	24617	3	19
2PS4-4	93061	8	235313	24617	3	21
32	14959	6	235323	24617	3	16
219E3376	97403	5	235325	24617	3	25
219E3377	97403	1	235326	24617	3	24
219E3378	97403	5	235332	24617	3	13
219E3381	97403	5	3-4-217105	45809	9	9
219E3384	97403	14	30-61608HITS12	38056	6	22
219E33856	97403	14	301182	01942	4	5
082X6	27695	8	30056-30STK	13445	11	42
0904	24617	2	30182-2-40	30780	1	10
0058	24617	2		30780	1	12
46C	29215	6	354E	24617	3	8
	29215	6	3603	22938	13	21
01ZZZ069	15277	1	3603-1	22938	13	17
01AZ0000	15277	14	4	70142	6	15
01BZ0000-1	15277	14	40-108	45809	9	18
01BZ0000-2	15277	14	400577	24617	3	14
01CZ0000	15277	14	400656	24617	3	27
01DZ0000-1	15277	14	401-6	15277	8	18
01DZ0000-2	15277	14	41FL4	93061	8	15
01EAC000	15277	14		93061	8	19
01EAC005	15277	14	41FS4	93061	8	11
01EZZ000	15277	14		93061	8	7
01FZ0000	15277	8	411610-02C	24617	2	28
01GZ0000	15277	14	411620-21A	24617	2	26
01JZ0000	15277	14	411621-07B	24617	2	25
01MAZ000	15277	11	411621-08B	24617	2	9
01MBZ000-1	15277	11	411622-08H	24617	2	13
01MBZ000-2	15277	11	411622-08J	24617	2	18
01IMCZ000	15277	11	411623-01R	24617	2	12
01IMDZ000-1	15277	11	411625-10A	24617	2	22
01IMDZ000-2	15277	11	411626-01B	24617	2	11
01IMDZ000-3	15277	11	411626-01D	24617	2	14
01IMDZ000-4	15277	11	411637-02C	24617	2	17
01IMDZ000-5	15277	11	416546	24617	3	9
01IMDZ000-6	15277	11	419009	38740	2	21
01IMZ007	15277	11		38740	3	10
01ZCA000GP1	15277	7	4250	22938	12	15
01ZCA000GP2	15277	7	4251	22938	12	19
01ZCA001-1	15277	7	426	00165	1	17
01ZCA0001-2	15277	7	431005	24617	3	22
01ZCA005	15277	7	445KLP110-5	45809	9	8
	15277	7	4600-2	22938	13	9
01ZCB000	15277	7	4601-7	22938	12	7
01ZCZ000	15277	7	467705	24617	2	3
01ZCZ002	15277	7	4702-5	22938	13	12
01ZCZ009	15277	7	48FS4-4	93061	8	10
01Z0Z000	15277	1		93061	8	14
01ZEZ000	15277	8		93061	8	17
01ZZZ007-1	15277	8		93061	8	21
01ZZZ007-2	15277	8	48F4-4	93061	8	8
01ZZZ007-3	15277	8		93061	8	13

CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

<u>REFERENCE</u> <u>No.</u>	<u>HPS</u> <u>CODE</u>	<u>FIG</u> <u>No.</u>	<u>ITEM</u> <u>No.</u>
50254	24617	2	5
5100-11	22938	12	8
51309	24617	2	32
	24617	2	35
51744	24617	2	23
51828	24617	2	27
52152	24617	2	31
53852	24617	2	4
53908	24617	2	36
5402-2	22938	12	14
5403-1	22938	12	18
55592	24617	2	10
5601-1	22938	12	9
5800-30-31	31741	9	10
58092	24617	2	37
59529	24617	2	30
59863	24617	2	24
601-4	75382	11	29
602028-14A	24617	2	7
602082-35	24617	2	29
602083-16	24617	2	16
60288-01A	24617	2	19
605	29215	6	7
	29215	6	18
6057	22938	13	14
6058	22938	13	13
6151	22938	13	18
6152	22938	13	19
6251-3	22938	13	20
6311	22938	13	15
6312	22938	13	6
6316	22938	13	10
7307807	00000	13	5
7728811	19207	11	1
7731428	77820	11	6
79035-14A	24617	2	38
79070-02A	24617	2	6
804	00165	1	18
8197882	73475	8	6
86869-04A	24617	2	39
920	82059	11	11

